

DXP, DXP Plus, and FX Series Digital Communications Systems LCD Speakerphone Station User's Guide



SCS 8412FJ



8012S



8024S



SCS 8324SJ-FB



SCS 8312S J-FB

This user's guide is for the following system:

**DXP, DXP Plus, and FX Series
Digital Communications Systems**

This user's guide applies to the following telephone models:

- **Impact 8012S-** Rev. A and later.**
- **Impact 8024S-** Rev. A and later.**
- **Impact SCS 8324S-** Rev. A and later**
- **Impact SCS 8312S-** Rev. A and later**
- **Impact SCS 8324F-** Rev. A and later**

Contact your Comdial dealer for updates of this as well as other Comdial publications.

Copyright © 2003 Comdial Corporation

All rights reserved. Unauthorized use of this document is prohibited.

Comdial Corporation

106 Cattlemen Road, Sarasota, FL 34232
(941) 554-5000 or (800) 266-3425

-Notice-

Comdial reserves the right to make any changes and improvements in the product described in this document at any time and without prior notice.

Impact is a trademark of Comdial Corporation. All other product names are trademarks of their respective owners.

Printed in USA

TABLE OF CONTENTS

1. Getting Started	1
1.1 Welcome	1
1.2 Setting Up Your Speakerphone	1
1.2.1 Positioning Your Speakerphone	2
1.2.2 Setting Display Contrast	3
1.2.3 Setting a Personal Ringing Tone.....	4
1.2.4 Setting Volume Levels.....	5
1.2.5 Answering and Making Calls.....	6
1.3 Understanding the Basic Functions	7
1.4 Your Speakerphone's Buttons	9
1.5 Your Speakerphone's Display Lights	12
2. Answering Calls	15
2.1 Answering Outside Calls	15
2.2 Answering Intercom Calls	16
2.3 Night-Transferred Calls - Line Access From Any Station	17
2.4 Holding Calls	18
2.5 Call Pickup	20
2.5.1 Group Call Pickup.....	20
2.5.2 Directed Call Pickup.....	20
2.5.3 Pickup For Monitored Stations	20
2.6 Receiving Subdued Off-Hook Voice Announcements (SOHVA)	22
2.6.1 Voice Announce Blocking.....	23
2.7 Caller ID (Automatic Number Identification)	24
3. Making Calls	25
3.1 Making Outside Calls	25
3.2 Making Intercom Calls	26
3.3 Automatic Dialing	28
3.4 Redialing	29
3.4.1 Redial - Last-Dialed Number.....	29
3.4.2 Redial Programming (Storing Numbers).....	29
3.5 Camping On - Busy Station, Automatic Callback	30
3.6 Advanced Camping On Options	31

3.6.1	Camping On - Idle Station, Automatic Callback	31
3.6.2	Camping On - Busy Station, Wait For An Answer (Call Waiting).....	32
3.7	Sending Subdued Off-Hook Voice Announcements (SOHVA)	33
4.	Advanced Call Handling	35
4.1	Waiting For A Line (Queuing)	35
4.2	Conferencing	36
4.3	Call Forwarding	38
4.3.1	Forwarding a Call.....	38
4.3.2	Diverting All Incoming Calls To Another Station	40
4.4	Call Forward Outside System (CFOS)	40
4.5	Call Parking	43
4.5.1	Parking a Call	43
4.5.2	Handling Park Recalls.....	44
4.6	Call Transferring	45
4.6.1	Screened Call Transfers	45
4.6.2	Unscreened Call Transfers	46
4.7	Other Call Transferring Options	47
4.7.1	Hot Transfer	47
4.7.2	Quick Transfer.....	48
5.	Nonverbal Messaging	51
5.1	LCD Message Delivery	51
5.2	Message Waiting Light and Messaging	54
5.3	Response Message Delivery	55
6.	Programming	57
6.1	DSS Numbers	57
6.2	Speed Dial Numbers	58
6.3	Feature Access Codes	60
6.4	LCD Feature Buttons	62
6.5	Reminder Alert	65
6.6	Response Message Button	67
7.	Other Advanced Features	69
7.1	Background Music	69
7.2	Line Groups	70
7.3	Do Not Disturb Condition	71
7.4	Automatic Redial	72

7.5	Tracker Paging System	74
7.6	Auxiliary Jack	76
7.7	Account Codes	78
7.8	Dial By Name	79
7.9	Volume Control	80
7.9.1	Setting Current Volume Level	80
7.9.2	Muting Your Speakerphone	82
7.10	Default Volume Control	82
7.11	Programmed Button Display	83
7.11.1	Button Functions Display (Button Query)	83
7.11.2	Status Of Busy Lines and Stations (Busy DSS/BLF Button Inquiry)	83
7.12	Automatic Set Relocation	84
7.13	Paging	85
7.14	IMIST Module	86
7.15	DSS/BLF Console Operation	87
7.15.1	Accessing The DSS/BLF Console Button Levels	88
	Appendix A Feature Access Codes	89
	Appendix B Display Abbreviations	93
	Appendix C Glossary	99
	Appendix D Speakerphone Characteristics	111
7.16	Full-Duplex Speakerphone Characteristics	111
7.17	Speakerphone User Guidelines	112
	Appendix E Feature Networking Support	115
	Index	127

Notes:

1. GETTING STARTED

1.1 Welcome

Congratulations and thank you for using a Comdial telephone! Your digital speakerphone is supported by a communication system with hundreds of built-in, standard features. This manual serves as a helpful guide for using these various functions.

The sections in this introductory chapter help you initially set up your speakerphone and become familiar with the controls and indicators. The remaining sections are titled as follows:

- Setting Up Your Speakerphone
- Understanding the Basic Functions
- Your Speakerphone's Buttons
- Your Speakerphone's Display Lights

1.2 Setting Up Your Speakerphone

When your new speakerphone arrives, the system installer unpacks your speakerphone and connects the line to a system jack. The following sections describe a few initial adjustments that allow you to quickly begin making and answering calls with some of the most basic features.



Impact 8024 LCD Speakerphone

1.2.1 POSITIONING YOUR SPEAKERPHONE

You should adjust the position of the speakerphone on your desk or table to suit your individual needs and maximize the performance of the sound activated features. When using your speakerphone, the microphone and loudspeaker are farther from you than when you use a handset. Some positioning tips to consider include:

For the microphone to best detect your voice, speak within three feet of it and face the speakerphone.


Background noise may prevent the sound-activated switches from operating properly. Avoid placing the speakerphone where it will detect sounds from typewriters, keyboards, printers, paging systems, or other equipment.

Place the telephone on a hard surface and away from table edges. Do not place the telephone in corners or enclosures. Do not let obstructions come between you and the microphone.

If you are using an Impact SCS model, your telephone has an adjustable pedestal to allow you to select the most comfortable viewing angle. When you receive the telephone, the pedestal is in its lowest position—flush against the pedestal.

- **To adjust the pedestal (Impact SCS Models only),**

1. GRASP the rear of the pedestal base firmly with one hand AND LIFT the rear portion of the telephone upward with your other hand.
2. LIFT the telephone upward with one hand AND RAISE the telephone supporting arms upward with your other hand. (Notice there are three sets of notches under the telephone corresponding to the three positions available.)

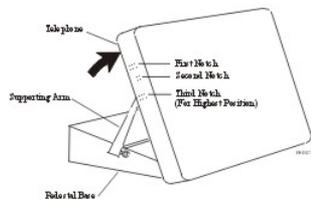

Adjusting the Pedestal

- When the telephone is at the desired height, SELECT the closest pair of notches AND INSERT the supporting arms in the notches. PRESS DOWN slightly on the telephone until you feel the supporting arms snap into place.

Also remember, as with any piece of electronic equipment, your telephone may be damaged by contact with liquids. Please try to place the telephone in an area that is free from the danger of spills.


NOTE: For more tips and information on speakerphone use including the use of a Full-Duplex Speakerphone, see Appendix D, Speakerphone Characteristics.

1.2.2 SETTING DISPLAY CONTRAST

You can darken or lighten the contrast of the display for best viewing.

- To adjust the display contrast,**

- SELECT OPTIONS.
- SELECT NEXT until the DISP option appears.
- SELECT DISP. Your display will read CONTRAST LEVEL
- SELECT LIGHT or DARK once for each degree of change desired.
- PRESS SPEAKER to end.

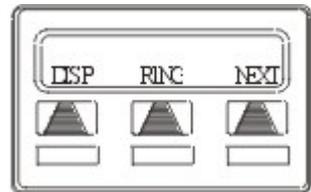

Select Display




Setting the Contrast Level

1.2.3 SETTING A PERSONAL RINGING TONE

You can choose one of many different ring tones for your telephone. Often, when several telephones are located close together, each user chooses a different personal ring tone.

- **To select one of the ring tones, proceed as follows:**

1. SELECT OPTIONS.
2. SELECT NEXT until the RING option appears.
3. SELECT RING.
4. SELECT UP OR DOWN to choose ring tone in display (a new tone will sound at each up or down press).
5. PRESS SPEAKER to end.

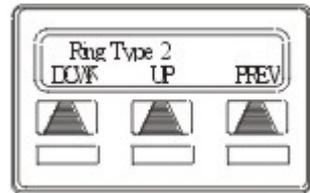


Selecting the Ring Tone

1.2.4 SETTING VOLUME LEVELS

The volume control on your telephone is a multipurpose control you can use to set the volume (loudness) of the ringer, the speaker, and the handset.

- **To set the ringer loudness level,**

- While your telephone is on-hook and idle, PRESS the VOLUME UP OR VOLUME DOWN button once for each change in loudness you desire. The ringer sounds once for each change as an example of the current setting.

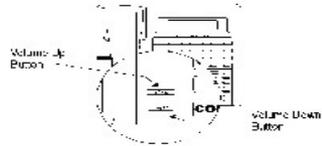


Impact SCS Volume Buttons

NOTE: If you set the ringer to the OFF position, your telephone sounds a short ring burst once for each call you receive at your station.

- **To set the speaker and handset loudness levels,**

1. PRESS INTERCOM button.
2. PRESS the VOLUME UP OR VOLUME DOWN button once for each change in speaker volume that you desire.
3. LIFT handset.
4. PRESS the VOLUME UP OR VOLUME DOWN button once for each change in handset volume that you desire.

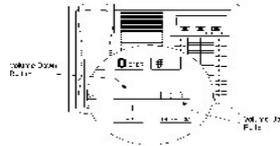

Impact Volume Buttons

Note: When a call ends, the system resets the speaker and handset volume of all future calls to the programmed (default) setting. For instructions in setting your speakerphone's default volume, see Volume Control section in the system specific Features chapter.

1.2.5 ANSWERING AND MAKING CALLS

Your speakerphone is now properly configured to answer and make calls to both stations within your system (intercom calls) and outside lines. Remember that when dialing an outside number, you must first select a line to connect your system to the local exchange.

- **When you hear outside ringing (long bursts),**

1. **PRESS** flashing line button.
2. **SPEAK** toward telephone **OR LIFT** handset if privacy is desired.

- **When you hear intercom ringing (two short bursts),**

1. **PRESS** *INTERCOM*.
2. **SPEAK** toward telephone **OR LIFT** handset if privacy is desired.

- **To dial an outside number manually,**

1. **PRESS** *INTERCOM*.
2. **DIAL 9 OR PRESS** other line button to select line (See *Line Groups* in the system specific Features chapters for more information on selecting an outside line).
3. **LISTEN** for dial tone.
4. **DIAL** number.
5. **LIFT** handset if privacy is desired.

- **To dial an intercom number manually,**

1. **PRESS** *INTERCOM*.
2. **DIAL** extension number (called telephone will ring or tone will be heard).
3. **SPEAK** toward telephone **OR LIFT** handset if privacy is desired.

1.3 Understanding the Basic Functions

Your speakerphone provides many versatile features for your use. These features are explained in terms of what they allow you to do.

Alphanumeric Display (Liquid Crystal Display—LCD)

- Displays time, day, date, and active call information
- Keeps you apprised of the status of your telephone
- Provides programming prompts

Auxiliary Jack

- Your Impact LCD speakerphone may be equipped with an auxiliary jack that provides an interface for a headset, a tape recorder, an external ringer, or an external pager.

Message-Waiting Light


- Indicates that a message awaits pick up

Microphone Opening


- Allows hands-free operation of speakerphone (speak clearly toward microphone opening)

Speaker

- Sounds distant party's voice
- Sounds ringing and call-in-progress tones

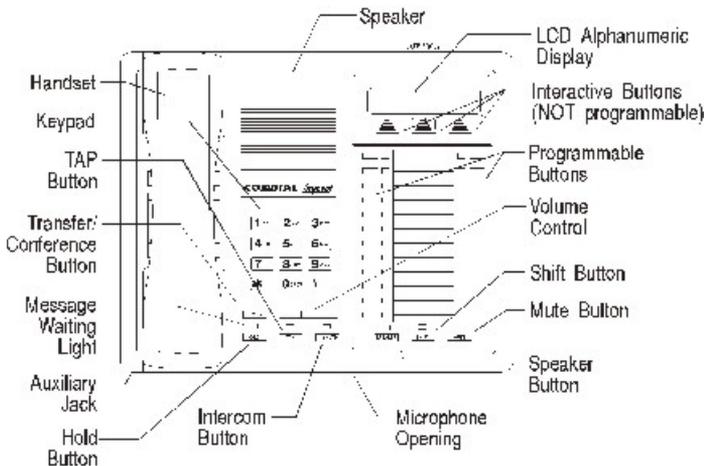

Impact 8024S- LCD Speakerphone**

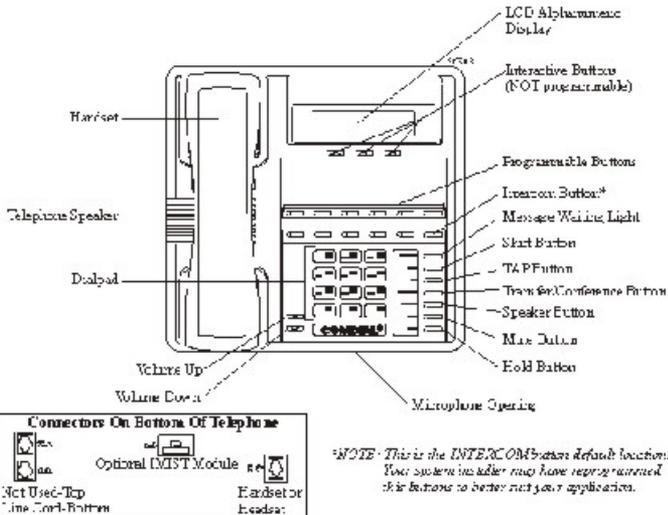

Impact SCS 8312S- LCD Speakerphone**

1.4 Your Speakerphone's Buttons

Hold Button (HOLD)

- Places a line or intercom call on hold
- Stores pauses in number sequences during programming
- If available, scrolls through LCD response messages
- If multiple held calls feature is available, scans or scrolls through calls placed on hold (when hold light is flashing)

Interactive Buttons (located below alphanumeric display)

- Provide quick and easy access to system features
- Provide straightforward button programming without dialing codes (the interactive buttons themselves, however, are not programmable)

Intercom Button (INTERCOM)

- Selects an intercom line
- Allows you to initiate many of the telephone's features

Mute Button (MUTE)

- Keeps the person on the line from hearing your conversation
- Allows reply to a Subdued Off-Hook Voice Announcement (SOHVA).

Direct Station Select/Busy Lamp Field (DSS/BLF) Programmable Buttons

- Allow you to store numbers for automatic dialing functions
- Allow you to store telephone extension numbers for Direct Station Selection (DSS)
- May be programmed as a feature button
- May be designated a line button by your system installer

Shift Button (SHIFT)

- Allows you to enter a second tier for storing and/or automatically dialing speed dial numbers. (That is, you can store two speed dial numbers at every programmable button location—one in the regular tier and one in the second tier). You activate the shift function by pressing this button and turning the shift light on before storing or automatically dialing a speed dial number from the second tier.

Speaker Button (SPEAKER)

- Turns your speaker on or off
- Disconnects a call when you are on a hands free call
- Ends or cancels programming

Tap Button (TAP)


- Recalls dial tone or generates a hookflash
- Retrieves held calls or last call placed on hold

Transfer/Conference Button (TRNS/CNF)

- Transfers calls
- Sets up conference calls

Volume Control (VOLUME UP or VOLUME DOWN)

- Regulates the volume of the ringer, speaker, handset, headset, background music, and group listening mode

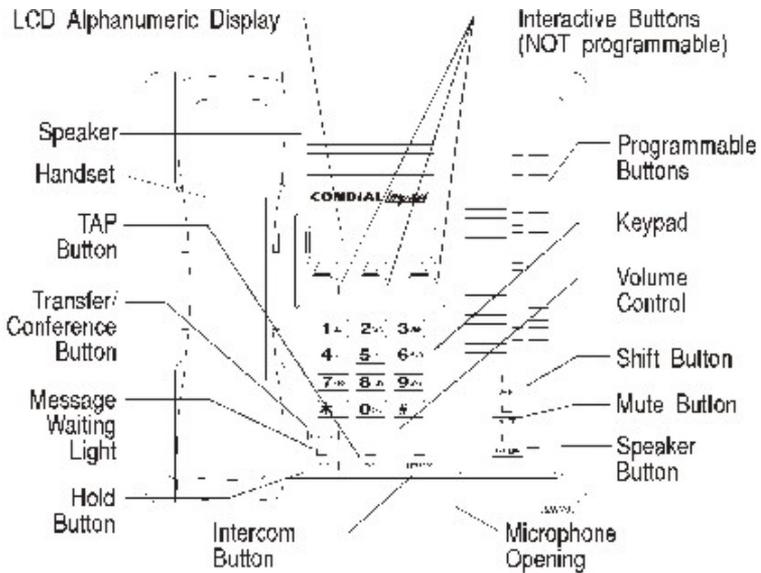

Impact 8012S- LCD Speakerphone**

1.5 Your Speakerphone's Display Lights

The lights (LEDs) on your LCD speakerphone indicate the status of lines, features, and intercoms.

Busy Lamp Field (BLF) lights (next to a Direct Station Select/Busy Lamp Field or DSS/BLF programmable button):

- Steady red = station is in use.
- Flashing red = station is receiving a call.
- Winking/Fluttering red = message-waiting light set for you by station associated with that DSS button.

Next to a line button:

- Steady green = this is your line, either on-hook (in a hands free mode) or off-hook, when the line is active.
- Steady red = another station is using this line.
- Flashing red = a call is coming in on this line.
- Flashing orange = this line will be answered when you lift the handset.
- Winking green = your line is on hold.
- Winking red = the call has been placed on hold by another station.
- Fluttering orange or green = your line has recalled from hold.
- Fluttering red = the line put on hold by another station has recalled.

Note: You can find the programmable buttons that the installer designates line buttons in the same location as the DSS/BLF buttons. Ensure that these buttons are labeled correctly to indicate their unique features.

Next to a fixed feature or programmable feature button:

- Steady red = the feature is on.
- Steady off = the feature is off.

Note: You can find the programmable buttons that the installer designates feature buttons through user programming in the same location as the DSS/BLF programmable buttons. Ensure that these buttons are labeled correctly to indicate their unique features.

Above the MUTE button:

- On steady = called party cannot hear your conversation.

Next to INTERCOM button:

- Steady green or red = you are using your intercom.
- Fluttering red = an LCD message is set on your telephone for others to receive when calling.
- Flashing orange = someone is calling your extension or a call is being transferred to you.

Getting Started

Above the HOLD button:


- (Non-SCS Series models) Flashing/Fluttering red = message waiting.
- Winking green = a line is on hold at your station (DXP, DXP Plus, FXS and FXT Systems only).

Next to the MESSAGE button (SCS Series Models only):

- Winking green = message awaits pick up.

Above the SPEAKER button:

- On steady (with the telephone on hook and busy) = speakerphone mode
- On steady (with telephone on hook and idle) = background music is turned on.

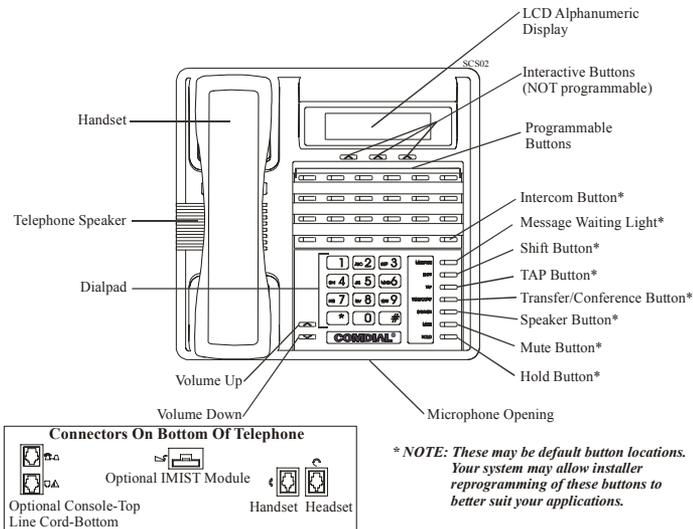

Impact SCS 8324F-** and Impact SCS 8324S-**


2. ANSWERING CALLS

2.1 Answering Outside Calls

When an outside call rings at your station, the LCD screen displays the system line number of the incoming call (e.g., L123) and any caller ID information that your station is programmed to receive. In addition to simply lifting the handset, your other options for answering the call are displayed above the interactive buttons.

- **When you hear outside ringing (two long bursts) and observe an orange flashing light,**

1. For speakerphone, PRESS flashing line button OR SELECT ANS AND SPEAK toward telephone.
2. For privacy, LIFT handset.
3. SELECT DND if you do not wish to answer the call at this time.

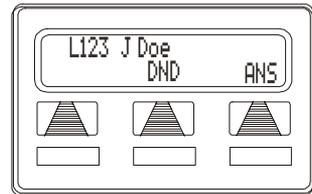

Outside Call on Line 123

- **When you hear outside ringing (two long bursts) and observe a red flashing light,**

1. PRESS flashing line button OR SELECT ANS.
2. SPEAK toward telephone OR LIFT handset if privacy is desired.
3. SELECT DND if you do not wish to answer the call at this time.

Note: For more information on setting DND at your station, see section titled *Do Not Disturb Condition* on page.


2.2 Answering Intercom Calls

Your station receives intercom calls in one of two ways depending upon system programming. In a *voice-first* setting, a short tone is followed by the caller's voice heard on the speaker. With a *tone-first* setting, the telephone rings in a distinctive pattern and the user of the receiving station must take action to answer.

As with an outside call, your LCD screen displays the extension number of the incoming call (e.g., Ext 3213) and any caller ID information that your station is programmed to receive.

- **When you hear an intercom tone followed by a caller's voice,**
—SPEAK toward the telephone to answer, OR LIFT handset if privacy is desired.

- **When you hear intercom ringing (two short bursts),**
 1. PRESS *INTERCOM* OR SELECT ANS.
 2. SPEAK toward telephone OR LIFT handset if privacy is desired.
 3. SELECT DND if you do not wish to answer the call at this time.

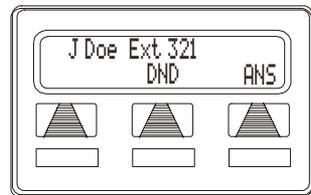

Intercom Call from J Doe

Note: For more information on setting DND at your station, see section titled Do Not Disturb Condition on page.

2.3 Night-Transferred Calls - Line Access From Any Station

The system attendant can transfer incoming calls to a particular station or stations for off-hour ringing.

- **If your telephone rings,**

1. PRESS line button with flashing light.
2. LIFT handset to talk.

- **When you hear loud ringing anywhere in the system,**

1. LIFT handset.
2. PRESS *INTERCOM*.
3. CHOOSE ringing zone:
 - DIAL 65 through 68 to select ringing zone (1-4).
 - DIAL 69 to answer for any zone.

2.4 Holding Calls

You can place a call on hold and retrieve it later. With a regular hold, you can pick up the held call at your telephone or another user can pick the call up at a telephone sharing the held call line appearance.

- **To place a call on hold,**

—PRESS *HOLD* (station button) or SELECT *HOLD* (interactive button). The light above your *HOLD* button begins to blink.

- **To retrieve a held call,**

1. PRESS line button of the held call (with winking green light), OR PRESS *TAP*.
2. SPEAK toward telephone OR LIFT handset if privacy is desired.

With an exclusive hold condition, you must pick up the held call at your telephone; no other telephone has access to the call.

- **To place a call on exclusive hold,**

—PRESS *HOLD* twice.


- **To retrieve exclusive hold,**

1. PRESS line button of held call (with winking green light), OR PRESS *TAP*.
2. SPEAK toward telephone OR LIFT handset if privacy is desired.

After a call has been on hold for the period of time (set by the installer of your system), the system causes four quick hold recall tone bursts to sound at your telephone, the flash rate of the line button becomes faster and the light becomes orange. If the call is on exclusive hold, it will revert to manual hold after the hold recall period.

- **If a held line is recalling, choose one of the following:**

1. SELECT HOLD to place the call on hold at your station and restart hold timer.
2. LIFT handset, PRESS line button (with flashing orange light) OR SELECT ANS to retrieve the call.

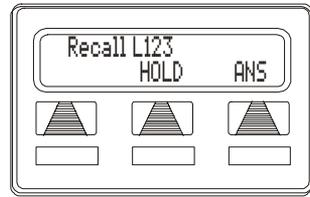

A Recalling Held Line

The installer can add a directed station hold feature to your telephone. With this feature, you can place a call on hold at another station. You can also pick up the held call that has been waiting the longest length of time at another telephone.

- **To place a call on directed station hold,**

1. ANSWER call.
2. PRESS *INTERCOM* OR *TRNS/CNF* if intercom call.
3. DIAL *90.
4. DIAL extension number of station to receive held call.
5. HANG UP.

- **To retrieve a held call at another station,**

1. PRESS *INTERCOM*.
2. DIAL #90.
3. DIAL extension number of station where call is currently on hold.
4. PRESS *DSS/BLF* button OR *TAP* to answer call.

Often, you will have more than one call on hold at your station. You know you can retrieve the last call placed on hold simply by pressing *TAP*; however, if you do not have line appearance for a line on which another call is holding, the system provides a way for you to access that call before servicing the last call you placed on hold.

- **To scan your held calls and retrieve a specific one:**

1. REPEATEDLY PRESS *HOLD* to scan held call list.
2. PRESS *TAP* to retrieve call.

2.5 Call Pickup

The Impact system offers three distinct methods to answer incoming calls that are ringing at other stations.

2.5.1 GROUP CALL PICKUP

The installer often arranges several telephones together in a user group. If your telephone is so arranged, you can answer calls that are ringing at other stations within your particular group.

- **To answer a call that is ringing within your group,**
 1. PRESS *INTERCOM*.
 2. DIAL #4.
 3. SPEAK toward telephone, OR LIFT handset if privacy is desired.

2.5.2 DIRECTED CALL PICKUP

Also, you can answer a call that is ringing at any telephone in the system if you know the ringing telephone's extension number.

- **To answer a call that is ringing at any telephone in the system,**
 1. PRESS *INTERCOM*.
 2. DIAL *4.
 3. DIAL extension number of ringing telephone.
 4. SPEAK toward telephone, OR LIFT handset if privacy is desired.

2.5.3 PICKUP FOR MONITORED STATIONS

Your telephone may have the personal intercom number of another telephone appearing at a programmable button location. You can use the light associated with this button to monitor the status of that telephone, and you can press the button to make a call to that telephone if you wish.


• **To monitor another telephone,**

1. OBSERVE the BLF light indications next to the Direct Station Select (*DSS/BLF*) button:

- Off = Station is idle
- Flashing (if enabled) = Station has an incoming call
- On = Station is busy

• **To call an idle monitored station or to answer one that is ringing,**

1. NOTE the BLF light condition.
2. PRESS assigned *DSS/BLF* button.
3. SPEAK toward telephone, OR LIFT handset if privacy is desired.

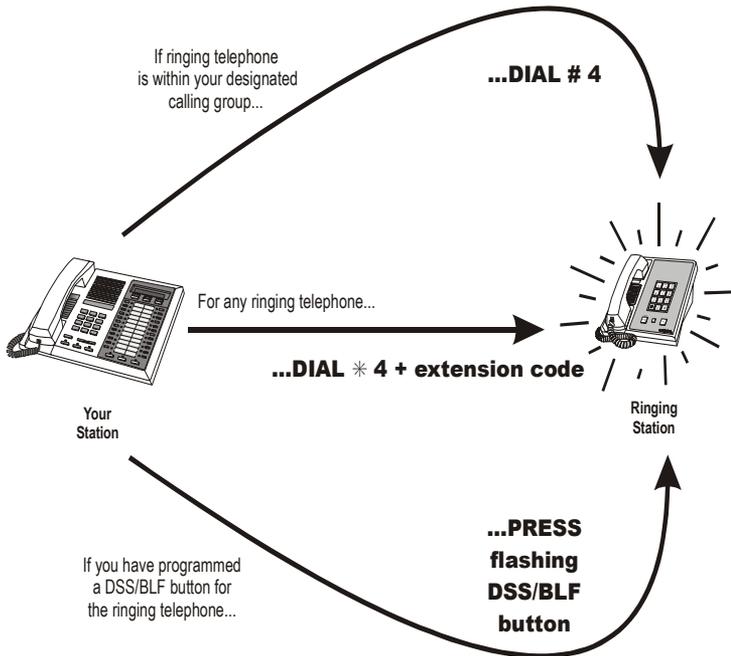

Answering Calls for Other Stations


2.6 Receiving Subdued Off-Hook Voice Announcements (SOHVA)

- **Handling an Incoming SOHVA**

This feature allows an intercom caller to break into your call by making an announcement through your handset receiver. The distant party that you are currently talking to cannot hear the announcement made by the SOHVA caller.

- **To respond to a SOHVA verbally,**


1. SELECT AND HOLD REPLY OR PRESS *MUTE*.
2. SPEAK into handset. Distant party cannot hear your response.
3. RELEASE REPLY OR *MUTE* after response is complete to return to distant party.

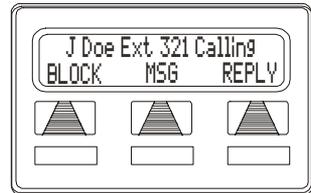

Incoming SOHVA

- **To respond to a SOHVA nonverbally through Response Messaging,**

1. SELECT MSG.
2. SELECT HAVE HOLD OR TAKE MSG. (Message appears in the display of the telephone making the SOHVA).
3. CONTINUE your current call with distant party. (SOHVA caller is automatically disconnected from your telephone).

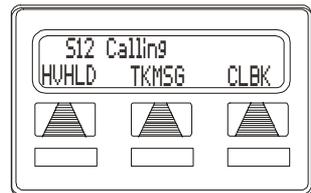

Message Response

- **To respond to a SOHVA by blocking (see below for more information),**

—SELECT BLOCK when you hear SOHVA tone. (SOHVA call is disconnected).


Note: A station that is currently active in speakerphone mode or has Voice Announce Block set CAN NOT receive a SOHVA.

2.6.1 VOICE ANNOUNCE BLOCKING

If your system installer makes this feature available, you can prevent voice announcements from sounding over your telephone speaker if you wish. This feature also blocks Subdued Off-Hook Voice Announcements (SOHVA) and will refuse any attempted SOHVAs.

- **To block (unblock) all voice-announced calls,**

1. SELECT OPTIONS.
2. SELECT NEXT until VAB appears.
3. SELECT VAB.
4. SELECT ON to block (OR OFF to unblock).
5. PRESS *SPEAKER* to end.

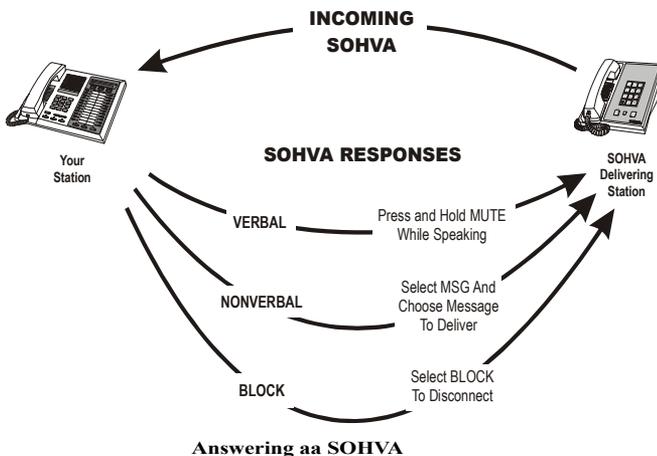

2.7 Caller ID (Automatic Number Identification)

When installed by system programming, the Caller ID feature allows you to view incoming call numbers before you answer them.

Incoming call numbers flash in the lower half of the LCD. If you answer the call, the number appears in the upper half of the LCD.

The system also stores numbers that ring on your line but receive no answer. If the call has been returned by someone else, selecting the S key reveals who returned the call. Everyone sharing your line can scroll through the stored numbers and choose which calls to return.

- **To scroll through ring-no answer numbers stored on your system (CID light is flashing),**
 1. SELECT the programmed CALLER ID button on your telephone. Your LCD will display the calling number, date, and time the call came in. The most recent call appears first in the list.
 2. SELECT the programmed CALLER ID button each time you wish to display the next most recent ring-no answer call to your line.
 3. To dial one of the numbers in the redial queue, SELECT the programmed SAVED NUMBER REDIAL button. The system will automatically dial the number.

Depending on your system programming, when a call is returned it might remain in the ring-no answer queue or the system might delete it from the ring-no answer queue. Your system installer can tell you how the feature is programmed. If the system is programmed to leave a returned number in the redial queue, the display will show a “S” next to numbers that have been returned.

- **To determine who viewed the number and returned the call,**
—DIAL *.


3. MAKING CALLS

3.1 Making Outside Calls

You can manually dial a number over any telephone line you select. Or, if the installer assigned a prime line or the idle line preference feature to your LCD speakerphone, the system automatically selects a line for use when you lift the handset or press the speaker button.

- **To dial an outside number manually,**

1. PRESS INTERCOM.
2. DIAL 9 OR other line button to select line (See Line Groups in the system specific Advanced Features chapters for more information on selecting an outside line).
3. LISTEN for dial tone.
4. DIAL number.
5. LIFT handset if privacy is desired.

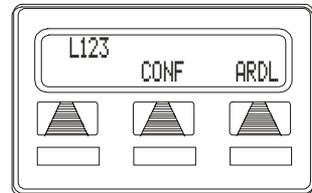

Outside Dialing Display

If your station has an assigned prime line, you will not have to select a line before dialing outside your system.

- **To dial an outside number using your prime line,**

1. PRESS SPEAKER OR LIFT handset if privacy is desired. Outside line is automatically selected.
2. LISTEN for dial tone.
3. DIAL number.


3.2 Making Intercom Calls

There are two methods for making an intercom call. One causes the called telephone to ring (tone-first). The other causes your voice to sound out at the called telephone (voice-first). Your installer can set the system to deliver either tone-first or voice-first calling.

Note: The following instructions assume a tone-first setting. You can change a call to voice announce signaling for that call simply by pressing the INTERCOM button again after dialing the extension number or by pressing the DSS/BLF button again.

- **To manually cause the other telephone to ring (tone calling),**

1. PRESS INTERCOM.
2. DIAL extension number (called telephone will ring).

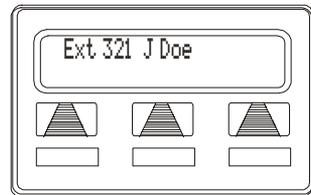

Press Intercom to Display Extension Number

- **To tone call automatically,**

- PRESS DSS/BLF button (called telephone will ring).


Note: The following instructions assume a voice-first default setting. Any user can change a call to a tone signaling for that call simply by pressing the INTERCOM button again after dialing the extension number or by pressing the DSS/BLF button again.

- **To voice announce manually,**

1. PRESS INTERCOM.
2. DIAL extension number.
3. SPEAK your announcement.

- **To voice announce automatically,**

1. PRESS DSS/BLF button.
2. SPEAK your announcement.

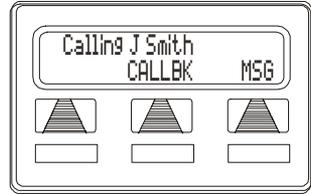

Ringling Intercom


3.3 Automatic Dialing

This feature provides one- or two-button speed dialing using programmable buttons at which you have previously stored numbers. There are two types of speed dial numbers: (1) numbers that you store for your own use (personal speed dial numbers), and (2) numbers that the system attendant stores for everyone's use (system speed dial numbers).

- **To automatically dial a number stored at one of the programmable buttons on your station, choose one of the following:**
 1. PRESS programmed speed dial button (line selection is usually a part of the stored speed dial number).
 2. PRESS SHIFT AND programmed speed dial button (to choose number stored as second choice at that button).

- **To speed dial a personal speed dial number,**
 - While on hook, DIAL speed dial number on dial pad (0 to 9).

- **To speed dial a system speed dial number,**
 - While on hook, DIAL * AND system speed dial number.

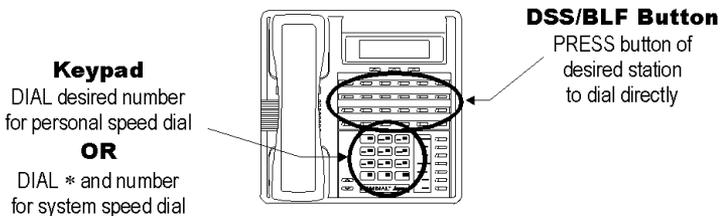

Speed Dialing Options

3.4 Redialing

For instruction on using your system's Automatic Redial feature, see page in the Other Features chapter.


3.4.1 REDIAL - LAST-DIALED NUMBER

- **To redial the last-dialed number,**
 1. PRESS SPEAKER OR HANG UP handset to disconnect current ringing or busy tone.
 2. DIAL #.
 3. LISTEN for ringing or busy tone over the telephone speaker:

3.4.2 REDIAL PROGRAMMING (STORING NUMBERS)

- **To permanently store a number you've just dialed, choose one of these methods:**

1. SELECT SAVE AND PRESS unused programmable button OR,
2. PRESS programmed SAVED NUMBER REDIAL button (see Feature Buttons section on page for set up details).

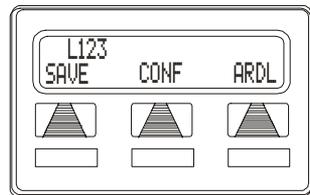

Saving a Dialed Number

- **To store a number while you are on a call (if available),**

1. PRESS programmed SAVE NUMBER REDIAL button twice (the display prompts you to dial a number).
2. DIAL the number that you wish to save (the system immediately saves the number for later redial; it does not dial it over the line you are on now).

- **To redial the saved number,**

1. PRESS line button to select a line.
2. PRESS programmed SAVE NUMBER REDIAL button (system automatically dials the number that you saved earlier).

3.5 Camping On - Busy Station, Automatic Callback


If you call another station and receive a busy signal or a Do Not Disturb tone, you can press a button that will cause the system to ring your telephone when the station is available.

- **To camp on at any busy station,**

1. SELECT CAMP.
2. Your telephone immediately hangs up. When the station you called becomes available, your telephone will ring with five short tone bursts.

- **When you hear five short tone bursts,**

—PRESS INTERCOM OR SELECT ANS. The other telephone will start ringing.

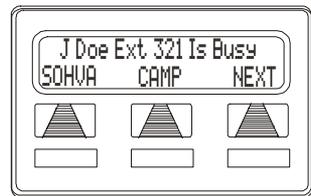

Camping On Selection

Note: If you do not press INTERCOM after the ring back tones within the time limit set by the installer, the call back is canceled.

- **To cancel the call back before your telephone sounds the tone bursts,**
—PRESS INTERCOM AND DIAL #6.

- **To camp on at a station with a Do Not Disturb condition set,**
—SELECT CAMP. A call back will occur when called station is no longer set in the Do Not Disturb mode.

3.6 Advanced Camping On Options

3.6.1 CAMPING ON - IDLE STATION, AUTOMATIC CALLBACK

If you call another station and hear ringing but receive no answer, you can press a button that will cause the system to ring your telephone when any activity is initiated at that station.

- **To camp on at a station for which you hear ringing but receive no answer,**
—SELECT CALLBK. Callback will occur after any activity is initiated at dialed station.

- **To cancel the camp-on condition,**
 1. PRESS INTERCOM AND DIAL #6.
 2. HANG UP OR PRESS SPEAKER to end.

3.6.2 CAMPING ON - BUSY STATION, WAIT FOR AN ANSWER (CALL WAITING)


If the telephone you have called is busy, you can send a call-waiting tone to the telephone and wait on the line for an answer (you must be using the handset for this feature to work).

- **To activate call waiting when you hear a busy signal,**
 1. DIAL *6 (called party hears tone).
 2. WAIT on line for reply.
 3. Called party can place the current call on hold or disconnect from the call to answer your call-waiting tone, or choose to ignore your call-waiting tone and continue current conversation.

- **To cancel call waiting,**
 1. PRESS INTERCOM AND DIAL #6.
 2. HANG UP OR PRESS SPEAKER to end.

- **To answer a call-waiting tone if you receive one while on a call,**
 1. HEAR short tone burst in receiver.
 2. PLACE current call on hold, OR complete call AND HANG UP (waiting call will ring at your telephone).

3. LIFT handset to answer call.

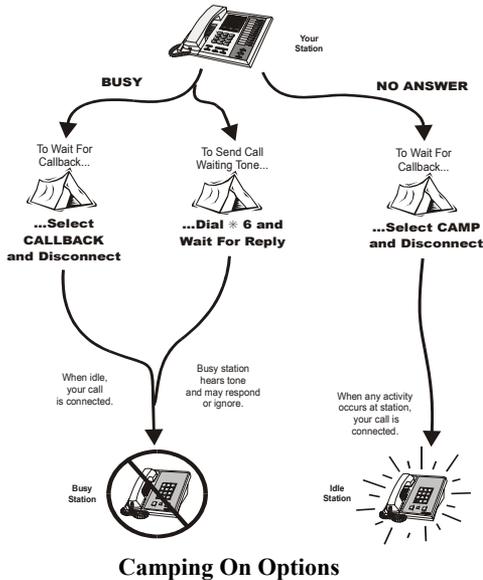


3.7 Sending Subdued Off-Hook Voice Announcements (SOHVA)

You can make a private voice announcement to another station that is off-hook and busy on a call if the installer has arranged the system to provide this feature.

- **Make a SOHVA announcement using the SOHVA button as follows:**

1. MAKE intercom call AND HEAR busy tone. If called station is on outside line, ring-back tone is heard, but SOHVA is still available.
2. SELECT SOHVA AND HEAR several quick tone bursts.
3. MAKE announcement.
4. WAIT on line for reply (either verbal or LCD reply). If your station returns to idle, the called party has blocked your SOHVA.

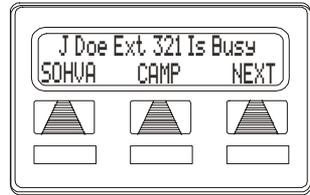

Making a SOHVA

Note: If the called station is currently in speakerphone mode or if the SOHVA has been denied by system programming, interactive button selection for SOHVA will not be available.

4. ADVANCED CALL HANDLING

4.1 Waiting For A Line (Queuing)

If all the lines in a line group are busy, you can place your telephone in a queue to await an idle line.

- **To queue for a line group,**

1. PRESS INTERCOM.
2. DIAL the line group access code (see Line Group Access code table on page for your system's codes).
3. HEAR busy tone.
4. DIAL *6.

- **If you have line appearance for a particular line and wish to queue for it,**

1. OBSERVE the busy status light (LED).
2. PRESS INTERCOM.
3. DIAL *6.
4. PRESS line button.
5. When line group is free, your telephone sounds several short tone bursts. When you hear this, lift handset, hear dial tone, and place call.

- **To cancel line queuing or line group queuing,**

1. PRESS INTERCOM.
2. DIAL #6.


4.2 Conferencing

When your telephone is joined together with several other telephones on the same call, the effect is called conferencing. You can make conference calls that involve up to seven parties, including you as the originating party, in any combination of outside lines and intercom parties.

Note: When setting up a conference call with outside lines and internal telephones, you must call the outside lines first.

- **To set up a conference call that includes any combination of outside lines and intercom parties,**

1. MAKE first call.
2. SELECT CONF. Call is placed on hold automatically.
3. SELECT next line AND MAKE next call.
4. SELECT CONF to establish conference.
5. PRESS *TRNS/CNF* button to add more parties.

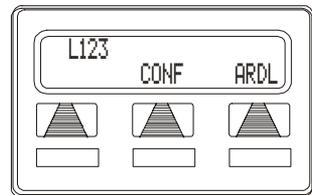


Establishing a Conference

- **To continue conversation on remaining line after other outside lines have dropped out of conference,**
 1. PRESS *HOLD*.
 2. PRESS the line button of the remaining party.
- **To retrieve a line from hold and bring that party back into the conference,**
 1. PRESS *TRNS/CNF*.
 2. PRESS line button.
 3. PRESS *TRNS/CNF*.

If you are involved in a conference call with two outside lines, you can drop out of this established conference call and leave the outside lines in the conference with each other. This is known as an unsupervised conference call.

- **To drop out of a conference call you initiated involving outside lines (creating an unsupervised conference),**
 - DIAL # (lines remain lighted and in use until one or both outside parties disconnect; when only one party drops out of an unsupervised conference, the other party remains on hold until he hangs up or the line is answered).
- **To rejoin an unsupervised conference between two outside lines,**
 - PRESS *TAP* or *DSS/BLF* button of one of the conferencing stations.

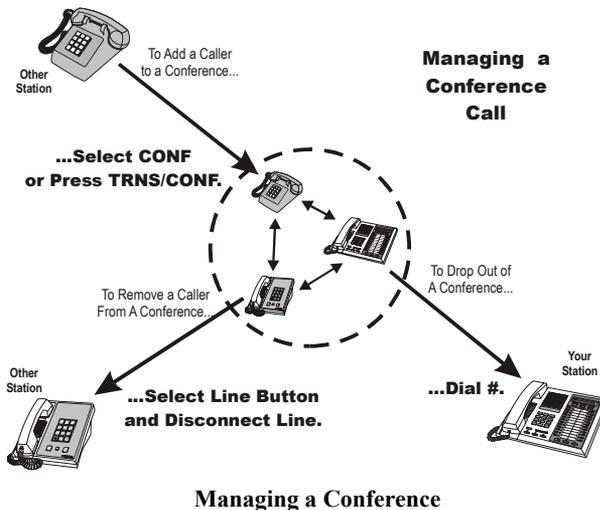

4.3 Call Forwarding

4.3.1 FORWARDING A CALL

You can forward the calls that normally ring at your telephone to another telephone. To remind you that your calls are being forwarded, your telephone will sound a short ring burst each time the system forwards a call.


- **To forward your calls,**

1. SELECT OPTIONS.
2. SELECT NEXT until the CFWD option appears.
3. SELECT CFWD.
4. SELECT SET.
5. Choose one of the following call forwarding options:


- SELECT PERS to forward prime line and intercom calls
- SELECT ALL to forward all calls

- SELECT NEXT AND No ANS to forward calls that ring at your station but receive no answer after a preprogrammed number of rings (THEN PRESS PERS to forward your prime line and intercom calls, OR PRESS ALL to forward all calls that ring with no answer at your telephone).


6. DIAL extension number of telephone to receive your forwarded calls.
7. PRESS SPEAKER to end. Display shows FWD.

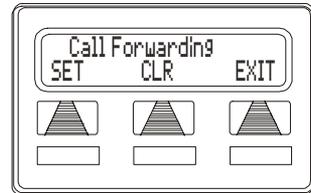

Selecting Call Forwarding

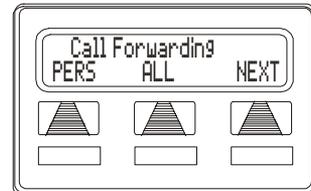


Call Forwarding Options

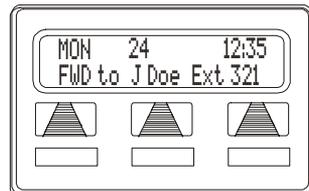

Call Forwarding Active

- **To cancel call forwarding,**
—SELECT the right interactive button.

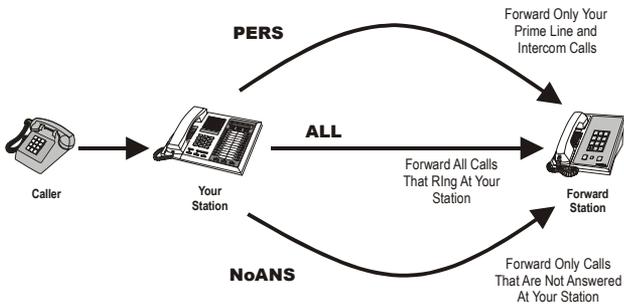

Call Forwarding Options

4.3.2 DIVERTING ALL INCOMING CALLS TO ANOTHER STATION

Call diverting permits you to send an incoming call to another station that you have previously designated. You can divert an incoming call to the designated station whether you are busy or idle.


- **To identify the station to receive diverted calls,**
 1. PRESS INTERCOM.
 2. DIAL *55.
 3. DIAL extension number of station to receive diverted call.

- **To divert calls to the designated station,**
 1. HEAR ringing AND/OR SEE flashing line status light.
 2. PRESS programmed CALL FORWARD button (system immediately forwards ringing call to station you designated). See page for programming instructions.

4.4 Call Forward Outside System (CFOS)

If enabled by your installer, the Call Forward Outside System (CFOS)* feature allows you to forward incoming or transferred line calls to telephone numbers outside the system.


- **To activate CFOS with your LCD speakerphone,**
 1. SELECT OPTIONS.
 2. SELECT NEXT until CFWD appears.
 3. SELECT CFWD.
 4. SELECT SET.
 5. SELECT NEXT until CFOS appears.
 6. SELECT CFOS.

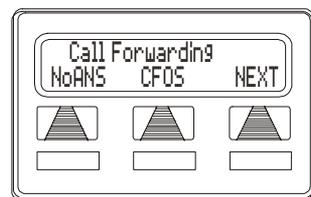

Selecting CFOS

7. CHOOSE a type of CFOS and SELECT the desired interactive button (to switch the type of CFOS you wish to select, PRESS TGL):

- SELECT Item for intercom calls
- SELECT Line for prime line calls
- SELECT Item/Ln for all calls
- SELECT RNA Item for ring-no-answer intercom calls
- SELECT RNA Line for ring-no-answer prime line calls
- SELECT RNA Item/Ln for all ring-no answer calls.

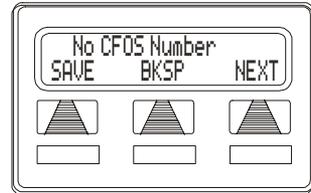

Set Forward Destination

8. SELECT outbound line (press line button, dial appropriate code, or do nothing and let previously selected line remain in effect). If you want to change the destination, you must enter something for the outbound line. (See page for line access codes.)
9. SELECT forward destination (dial number, press speed dial button, or do nothing and let previously selected destination remain in effect).
10. PRESS SPEAKER to end (display shows CFOS and type of forwarding).

- **To deactivate CFOS, choose one of the following:**

1. PRESS INTERCOM AND DIAL *56 OR,
2. SELECT OPTIONS.
3. SELECT NEXT until CFWD appears.
4. SELECT CFWD.
5. SELECT CLR.

- **To join an active CFOS call from the CFOS-enabled station,**

—Note flashing HOLD light indicating active CFOS call, and press TAP. Join CFOS-forwarded party and CFOS destination in a conference call.

** Comdial has taken reasonable steps in the design of all product features, including CFOS, which protect against unauthorized or fraudulent access to, or use of, a system, or which protect against unauthorized, fraudulent or unaccounted-for access to, or use of, long distance lines. However, no system is entirely invulnerable or immune from unauthorized or fraudulent access or use, or unaccounted-for access or use, and therefore Comdial disclaims any and all liability, and makes no warranty, express or implied, relating to unauthorized or fraudulent access or use, or unaccounted-for access or use.*

4.5 Call Parking

4.5.1 PARKING A CALL

You can place an intercom or outside call on hold in the system so that it can be answered from any station, even though it may not have a line appearance for the call. You accomplish this by placing the call in one of many park orbits, where the call remains until it is answered.

- **To park a call in orbit,**

1. While on the call, PRESS INTERCOM OR PRESS TRNS/CNF if intercom call.
2. DIAL *.
3. DIAL code for park orbit (910 to 999 for orbit 10–99).
4. Remember the code for later use or make it known to those who need to know it in order to retrieve the call.

- **To park a call using a programmed PARK button,**

—While on the call, PRESS the programmed PARK button (the system places the call in a preselected park orbit and lights the PARK light).

- **To retrieve a call that was placed on hold in the system (parked),**

1. PRESS INTERCOM.
2. DIAL #.
3. DIAL code for orbit (910 to 999 for orbit 10–99), OR PRESS programmed PARK button.

4.5.2 HANDLING PARK RECALLS


When a parked call times out of the system, it returns to your telephone in the form of a park recall (you hear four short tone bursts at 12-second intervals).

- **To answer a park recall,**

- SELECT ANS. The call will then connect to your station.

- **To place a park recall on hold at your station,**


- SELECT HOLD. After the call remains on hold for a period of time, it rings back to your telephone as a hold recall.

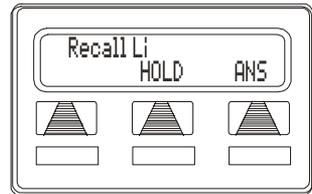

A Park Recall

- **To re-park a park recall and restart the park timer,**

1. ANSWER/RETRIEVE call.
2. SELECT PARK (the system places the call back in its original park orbit where it remains until it is answered or recalls again).

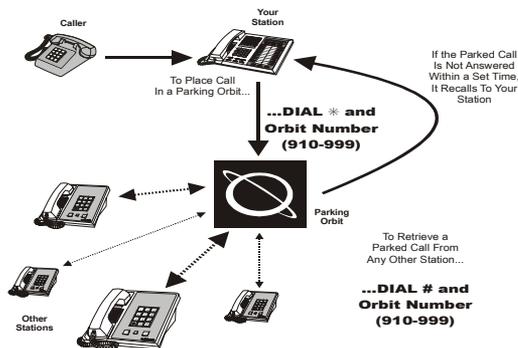

Parking Calls

4.6 Call Transferring

4.6.1 SCREENED CALL TRANSFERS

You can answer a call at your LCD speakerphone and transfer it to another telephone. If you first identify the caller to the party receiving the transfer (giving that user the opportunity to prepare for the call), you have made a screened transfer.


- **To screen and transfer a call to another telephone in the system,**

1. ANSWER call.
2. PRESS TRNS/CNF (call is automatically placed on hold).
3. DIAL extension number of telephone to receive transfer, OR PRESS DSS/BLF button for that extension.
4. ANNOUNCE call when intercom party answers.
5. PRESS SPEAKER to disconnect (if in speakerphone mode), OR HANG UP.

The intercom party then has the call (if he or she answered the screened transfer with the handset). If you announce the transfer over the speaker, the intercom party's telephone will ring with the transferred call after you hang up.

- **If the intercom party is busy, take one of the following steps (if made available at your telephone by installer programming):**

1. SELECT RECON to reconnect the call to your station.
2. SELECT SOHVA to interrupt the call and tell the intercom party that a call awaits.
3. SELECT MSG to leave a message-waiting indication at the called station.

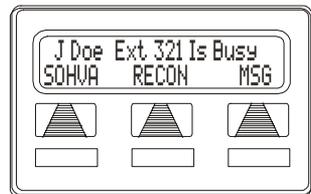

Attempting a Transfer

- **If the intercom party does not answer their telephone when ringing, take one of the following steps:**


1. SELECT RECON to reconnect the call to your station.
2. SELECT MSG to leave a message-waiting indication at the station.

4.6.2 UNSCREENED CALL TRANSFERS

You can answer a call at your LCD speakerphone and transfer it to another telephone. If you transfer the call without first announcing it, you have made an unscreened transfer.

- **To transfer an unscreened call to another system telephone,**

1. ANSWER call.
2. PRESS TRNS/CNF (call is automatically placed on hold).
3. DIAL extension number of telephone to receive transfer, OR PRESS DSS/BLF button for that extension.
4. PRESS SPEAKER to disconnect (if in speakerphone mode), OR HANG UP. The transfer will ring at the called telephone.

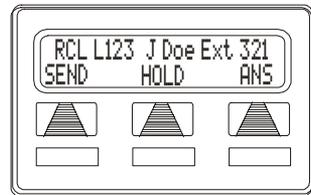

Attempted Transfer of Line 123 to J Doe is Recalling

- **If an unscreened transfer call is not answered and recalls to your telephone, you can take one of the following steps:**

1. PRESS HOLD to place the call on hold at your telephone.
2. SELECT ANS to return to the call.
3. SELECT SEND to retry the transfer.

4.7 Other Call Transferring Options

4.7.1 HOT TRANSFER

A hot transfer is a type of screened transfer. This feature is useful for transferring calls to people who need to work in a hands free mode. Once you announce the call and the system completes the transfer, the person receiving the transfer can simply begin speaking toward his or her speakerphone to answer the call.

- **To make a hot transfer to another telephone in the system,**

1. ANSWER call.
2. PRESS TRNS/CNF (the system automatically places the call on hold).
3. DIAL extension number of telephone to receive the transfer OR PRESS DSS/BLF button for that extension.
4. ANNOUNCE call.
5. PRESS TRNS/CNF.
6. If necessary, PRESS SPEAKER to disconnect (if in speakerphone mode) OR HANG UP. The person receiving the transfer then has the call.

4.7.2 QUICK TRANSFER

When the installer programs the quick transfer method on your telephone, you can deliver an automatic transfer of an incoming line call without pressing the TRNS/CNF button.

- **To do a quick screened transfer,**

1. ANSWER call.
2. DIAL intercom number for transfer location.
3. When party at transfer location answers, ANNOUNCE call.
4. HANG UP, SELECT RELEASE, OR PRESS SPEAKER button.

- **To do a quick unscreened transfer,**

1. ANSWER call.
2. DIAL intercom number for transfer location.
3. HANG UP, SELECT RELEASE, OR PRESS SPEAKER button.

Call Transferring Summary			
Transfer option	What are the sender's actions after answering original call?	How is the transferred call delivered to the receiver?	Best suited for:
Screened Transfer	<ol style="list-style-type: none"> 1. Press TRNS/ CNF 2. Dial extension 3. Announce call 4. Disconnect 	Normal intercom ringing (two short bursts) and the introduction of the call; if answered in speakerphone mode, ringing will also follow the transfer	Normal transfers that require introduction.
Unscreened Transfer	<ol style="list-style-type: none"> 1. Press TRNS/ CNF 2. Dial extension 3. Disconnect 	Normal intercom ringing (two short bursts)	Expected transfers that need no introduction.
Hot Transfer	<ol style="list-style-type: none"> 1. Press TRNS/ CNF 2. Dial extension 3. Announce call 4. Press TRNS/ CNF 5. Disconnect 	Transfer introduction followed directly by the incoming call	Personnel who must receive speakerphone calls in a hands-free mode.

Call Transferring Summary (Continued)			
Transfer option	What are the sender's actions after answering original call?	How is the transferred call delivered to the receiver?	Best suited for:
Quick Transfer (with intro)	<ol style="list-style-type: none"> 1. Dial extension 2. Announce call 3. Disconnect 	Intercom ringing (two short bursts) and the introduction of the call; if answered in speakerphone mode, ringing will also follow the transfer	Normal transfers from attendants and operators who handle a large number of incoming calls which require transfer.
Quick Transfer (without intro)	<ol style="list-style-type: none"> 1. Dial extension 2. Disconnect 	Normal intercom ringing (two short bursts)	Expected transfers from attendants and operators who handle a large number of incoming calls which require transfer.

5. NONVERBAL MESSAGING

5.1 LCD Message Delivery

You can set system-supplied messages at your station to be received and displayed by a calling LCD speakerphone.

- **To turn on a message from your telephone,**

1. PRESS INTERCOM AND DIAL *02.
2. DIAL the desired code number from your message list (01–30) on the next page, OR PRESS HOLD button to scroll through the available messages AND DIAL # to select.

Note: See following page for LCD dialing codes.

- For a “Back At” message, dial the code for time numbers and colon from dialing codes table.
(For example, DIAL # 00 01 29 04 05 for the time 01:45).
 - For a “Call” message, dial code for telephone number of your new location.
(For example, DIAL # 09 07 08 15 02 02 00 00 for the number 978–2200).
3. DIAL # AND PRESS SPEAKER to end message.

- **To turn off the message and your intercom light,**

—PRESS INTERCOM AND DIAL #02.

Nonverbal Messaging

Dialing Code Table			
Character	Dialing Code	Character	Dialing Code
1	01	8	08
2	02	9	09
3	03	0	00
4	04	space	12
5	05	–	15
6	06	:	29
7	07		

LCD MESSAGE LIST (Write the attendant supplied messages here.)	
Dial Code	Message
01	Back at (default message 1)
02	Call (default message 2)
03	Ask them to hold (default message 3)
04	Take a message (default message 4)
05	I will call back (default message 5)
06	
07	
08	
09	
10	
11	
12	
13	
14	

LCD MESSAGE LIST (Write the attendant supplied messages here.)	
Dial Code	Message
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	

5.2 Message Waiting Light and Messaging

If the system installer designates your LCD speakerphone to have message-wait originate ability, you can turn on the message-waiting light of any other telephone.

- **To turn on the message-waiting light (and a broken dial tone, if installer programmed) at another station that is idle or busy,**

1. PRESS INTERCOM.
2. DIAL *3.
3. DIAL extension number OR PRESS DSS/BLF button of station to be alerted. The message-waiting light of called station will flash.

- **You can also turn on the message-waiting light and broken dial tone at another station when that station is busy,**

1. HEAR the busy tone AND REMAIN on the line.
2. SELECT MSG.
3. HANG UP.



Leaving a LCD Message

- **To turn off the message waiting light at a busy or idle station,**


1. PRESS INTERCOM.
2. DIAL #3.
3. DIAL extension number OR PRESS DSS/BLF button of station that was alerted. The message-waiting light of called station will turn off.

- **To turn off the message-waiting light during message-delivering conversation,**

—PRESS INTERCOM once if off-hook, twice if on-hook.

- **To receive a message at an alerted station,**

1. OBSERVE flashing message waiting light and the LCD message indicating who called for you.
2. SELECT CALL to dial the messaging station automatically.
3. SELECT CLEAR to clear the message from your station.

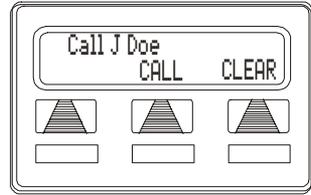

Receiving a Message

5.3 Response Message Delivery

By programming one or more RESPONSE MESSAGE buttons on your LCD speakerphone, you can respond with a variety of messages to many calling situations. A scrolling RESPONSE MESSAGE button allows the sender to select from several different messages which have been programmed by the system attendant. A fixed RESPONSE MESSAGE button sends the same message you previously select each time it is pressed. (See page for instructions on programming a dedicated RESPONSE MESSAGE button.

- **To send an LCD message when you call and receive busy signal or no answer,**

1. While still on the call, PRESS the appropriate RESPONSE MESSAGE button to send a preselected message to the other telephone,
2. If a scrolling Response Messaging was programmed, continue to PRESS RESPONSE MESSAGE button AND DIAL # when your display shows the message you wish to send.

- **To send an LCD message to a caller who has initiated a SOHVA or intercom call from another LCD telephone,**

1. HEAR the SOHVA tone or voice announcement in your handset or headset.
2. PRESS the appropriate fixed RESPONSE MESSAGE button to send a preselected message to the calling telephone,

Nonverbal Messaging

3. If a scrolling Response Messaging was programmed, continue to PRESS RESPONSE MESSAGE button AND DIAL # when your display shows the message you wish to send.

6. PROGRAMMING


6.1 DSS Numbers

Storing another station extension number at a DSS/BLF programmable location allows you to monitor that station, dial with the press of one button, or pick up or hold calls at that station quickly and conveniently.

- **To store an intercom number as a DSS number,**

Note: Storing DSS numbers at button locations will overwrite any previously stored numbers.

1. SELECT OPTIONS.
2. SELECT NEXT until the DSS option appears.
3. SELECT DSS.
4. PRESS programmable button to choose DSS/BLF button location.
5. DIAL extension number.
6. REPEAT the previous steps, OR SELECT EXIT.
7. PRESS SPEAKER to end.

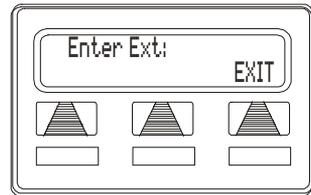

Designating an Extension



CAUTION



Do not attempt to program interactive buttons; doing so can cause the system to make features unavailable. If you inadvertently program interactive buttons, you can retrieve their functions in the following manner:

1. PRESS INTERCOM **1
2. PRESS the interactive button to be reprogrammed
3. DIAL 91, 92, or 93 (for buttons from left to right).

6.2 Speed Dial Numbers


Speed dialing is a feature that lets you store and dial frequently called numbers using one or two buttons. You can store numbers for speed dialing at any programmable button that is not now assigned as a line button or other feature by the system administrator or installer or at the keypad numbers.

Note: The Federal Communications Commission (FCC) requires that when programming emergency numbers and/or making test calls to emergency numbers:

- 1. Remain on the line and briefly explain to the dispatcher the reason for the call;*
- 2. Perform such activities in the off-peak hours, such as early morning or late evening.*


- **To store an outside number as a speed dial number, follow the display prompts and proceed as follows:**

1. SELECT OPTIONS.
2. SELECT NEXT until SDIAL option appears.
3. SELECT SDIAL to choose speed dial programming.
4. PRESS programmable button OR dial pad button (0–9) to choose storage location (remember, to access second level storage at a programmable button, press SHIFT first).

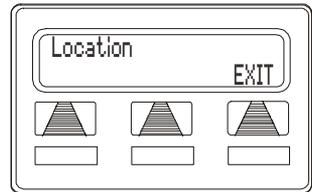

Choosing a Button

Keypad
DIAL desired number
for personal speed dial
OR
DIAL * and number
for system speed dial

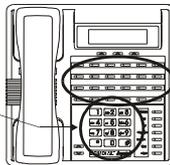


DSS/BLF Button
PRESS button of
desired station
to dial directly

Speed Dialing Options

5. CHOOSE your speed dial route from the following list:


- PRESS line button to select outside line,
- DIAL 00 to select prime line or last line used,
- DIAL 01 to 16 to select line group,
- PRESS INTERCOM button or dial 8 to select intercom.

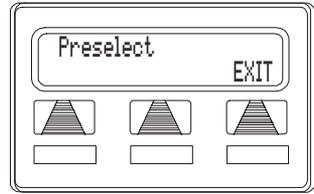

Selecting Line or Intercom

Note: You may need a pause between numbers to compensate for differences in response time between your system and the host system (ask your attendant about this). To store a pause, press HOLD, then continue dialing. If your system is behind a host system that needs a hookflash to access a feature, press TAP to store a hookflash, then continue dialing.

6. DIAL number (up to 16 digits long).
7. SELECT SAVE to store the number.
8. REPEAT previous steps until all numbers are stored, OR SELECT EXIT.
9. PRESS SPEAKER to end.

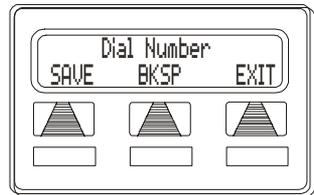


Dialing a Speed Number

6.3 Feature Access Codes


In addition to the system features which may be programmed using the interactive buttons, several other features may be programmed by using their access codes. The feature codes are programmed like speed dial numbers and can occupy the same programmable buttons on your telephone. Access codes are listed in Appendix A, *Feature Access Codes* found on page.

- **To store a system feature access code,**

1. SELECT OPTIONS.
2. SELECT NEXT until SDIAL option appears.
3. SELECT SDIAL to choose speed dial programming.
4. PRESS programmable button OR dial pad button (0–9) to choose storage location (remember, to access second level storage at a programmable button, press SHIFT first).
5. PRESS INTERCOM when prompted to preselect line.
6. DIAL access code associated with feature.
7. SELECT SAVE to store the number.
8. REPEAT previous steps until all numbers are stored, OR SELECT EXIT.
9. PRESS SPEAKER to end.

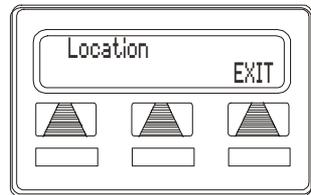

Choose a Location

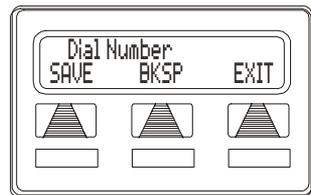

Dial the Access Code

- **To manually store an access code,**

1. PRESS INTERCOM.
2. DIAL **3.
3. PRESS programmable button.
4. DIAL access code for feature.
5. PRESS SPEAKER to end.
6. LABEL button location.

As you program numbers, fill in the identification strips on your telephone as well as these tables.

Speed Dial Numbers, Features or DSS Locations (Programmable Buttons)			
1		13	
2		14	
3		15	
4		16	
5		17	
6		18	
7		19	
8		20	
9		21	
10		22	
11		23	
12		24	

Personal Speed Dial Numbers (Keypad Buttons)			
1		6	
2		7	
3		8	
4		9	
5		0	

6.4 LCD Feature Buttons

You can create feature access buttons to make operation easier. To do this, use the interactive buttons to select the feature you want to store, and then store it on a programmable button (see the instructions on the next page).


- **Account Code Button (ACCT)**—allows you to enter an account code for call record purposes.
- **Auxiliary Pager (APAGE)**—selects external pager operation through the auxiliary jack.
- **Auxiliary Recorder (ARECD)**—selects tape recorder operation through the auxiliary jack.
- **Auxiliary Ringer (ARING)**—selects auxiliary ringer operation through the auxiliary jack.
- **Call Forward Button (CFWD)**—allows you to forward all of your calls to another telephone.
- **Camp-On With Automatic Call Back (CAMP)**—allows you to camp on to a station. The system calls you back as soon as the called station becomes idle or occupied.
- **Camp-On (Call Waiting) (CAMP)**—when calling a busy station, this feature allows you to send a call waiting tone to the station and to wait on-line for a reply.
- **Clear Features (CLEAR)**—clears a currently active or engaged feature.
- **Do Not Disturb Button (DND)**—prevents other telephones from ringing your telephone.
- **Group Listen Button (GPLSN)**—allows others to hear a conversation over the telephone speaker while you use the handset or headset; the distant party can hear only the conversation transmitted through the handset or headset microphone.
- **Headset (HDSET)**—enables headset operation through the auxiliary jack.

- **Music Button (MUSIC)**—allows you to enable or disable background music; also allows you to choose from two pre-programmed music sources.
- **Page Button (PAGE)**—provides one-button access to paging.
- **Park Button (PARK)**—parks calls in preselected park orbit.
- **Pick-Up Button (PCKUP)**—allows you to pick up a call ringing elsewhere in your system.
- **Privacy Release Button (PRIV)**—allows other telephones which share a line appearance for current call to join.
- **Saved Number Redial Button (SAVE)**—redials the last number saved
- **Voice-Announce Block Button (VAB)**—blocks voice announcements.

Programming of the feature access buttons may require several selections involving many LCD screens. If an abbreviation used is not familiar to you, consult Appendix B, Display Abbreviations on page.


- **To create a feature access button,**

1. SELECT OPTIONS.
2. SELECT NEXT until the FEAT option appears.
3. SELECT FEAT.
4. SELECT NEXT repeatedly until desired feature choice is displayed.
5. SELECT one of the buttons below the current display to choose desired selection.

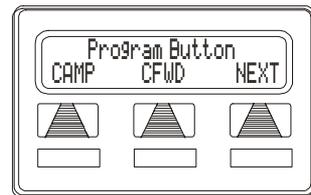

Selecting a Feature

6. RESPOND to any menu prompts associated with feature (see example for Pickup).
7. PRESS programmable button for storage location.
8. REPEAT steps 3 through 7 for other features, OR SELECT EXIT to end programming.

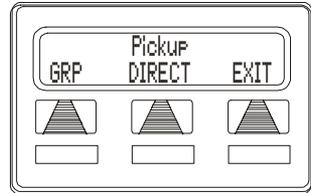

Responding to Prompts to Program a Pickup Button

- **To clear a feature button assignment,**


- REPEAT the above procedure, but SELECT CLEAR before selecting storage location button.

6.5 Reminder Alert


You can set up to two reminder alerts to sound at your LCD speakerphone so that you will remember important regular events or occasional events.

- **To set a reminder alert at your telephone,**

1. SELECT OPTIONS.
2. SELECT NEXT until the ALERT option appears.
3. SELECT ALERT.
4. SELECT 1 OR 2 to select available alert designation; if you have already programmed an alert for 1, select 2 to set a second alert condition.
5. SELECT ON (Select OFF to turn off an alert that has already been set).
6. DIAL reminder time using the numbers on the dial pad (remember to dial a zero before single digit times: 01 for one o'clock, 02 for 2 o'clock, etc.).
7. SET AM or PM.
8. SELECT SAVE.
9. PRESS SPEAKER to quit.

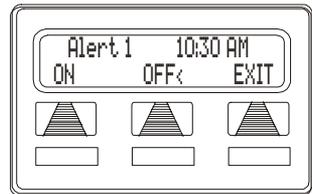

Setting an Alert

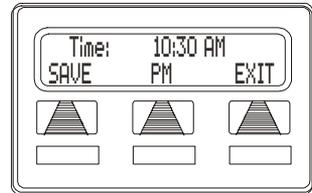


Setting the Alert Time

When an alert sounds at the set time, you hear four short tone bursts, which will continue until acted upon. If you are not at your station to hear the alert when it sounds, your telephone's ring tone changes to the alert tone for every incoming call until you respond to the alert.

- **To respond to an alert after it sounds, choose one of the following:**

1. SELECT CLEAR to turn off the alert.
2. SELECT SET to reset the alert for the same time the following day.

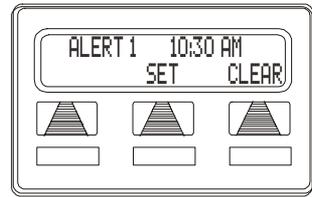

Responding to an Alert

6.6 Response Message Button

You may program a RESPONSE MESSAGE button, which allows you to send an LCD message to a caller who has initiated a SOHVA or intercom call from another LCD speakerphone, or to send an LCD message to another LCD speakerphone that you call and receive a busy signal or no answer.

- **To store a scrolling RESPONSE MESSAGE button, proceed as follows (user may press button repeatedly to choose from up to 30 system supplied messages),**

1. PRESS INTERCOM
2. DIAL **6.
3. PRESS programmable button for RESPONSE MESSAGE button location.
4. DIAL 00
5. DIAL # to save programming.
6. PRESS SPEAKER to end.
7. LABEL the button location.

- **To store a fixed RESPONSE MESSAGE button (delivers the same message each time it is pressed),**

1. PRESS INTERCOM.
2. DIAL **6
3. PRESS programmable button for RESPONSE MESSAGE button location.
4. DIAL message number (01-30) from list of messages.

Note: Programmed messages available for use are created by the system attendant and listed in a table on page.

5. DIAL # to save programming.
6. PRESS SPEAKER to end.
7. LABEL the button location.

Notes


7. OTHER ADVANCED FEATURES

7.1 Background Music

If the telephone system supplies background music, you can turn it on at your LCD speakerphone while on-hook and idle. The system automatically turns background music off during calls and voice announcements.

- **To turn the music on,**

1. SELECT OPTIONS.
2. SELECT NEXT until the MUSIC option appears.
3. SELECT MUSIC.
4. SELECT SET.
5. SELECT SRC 1 or SRC 2 for the music source.
6. PRESS SPEAKER to end (the speaker light turns on when background music is on).
7. ADJUST music volume with the volume buttons.

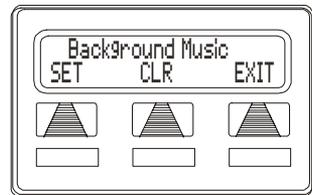

Setting Background Music

- **To turn the music off,**

1. SELECT OPTIONS.
2. SELECT NEXT until the MUSIC option appears.
3. SELECT MUSIC.
4. SELECT CLR.
5. PRESS SPEAKER to end (the speaker light turns off when background music is off).

7.2 Line Groups

Some systems have telephone lines arranged into line groups which may be accessed for outside calling instead of selecting an individual line button.

• **If your system has line groups, access them as follows:**

1. PRESS INTERCOM.
2. DIAL desired line group access code,

Line Group Access Codes		
Line Group	Default Code	Active Code*
1	9	
2 through 11	80 through 89	
12 through 16	60 through 64	

** If your system attendant has reassigned your line group access codes, write them here for future reference.*


3. LISTEN for outside dial tone.
4. DIAL desired number.
5. LIFT handset to talk.

7.3 Do Not Disturb Condition

This feature keeps calls from ringing at your LCD speakerphone and makes your station appear to be busy to intercom calls. As a reminder, a station that is set in Do Not Disturb mode will display this information on the LCD.

- **To enable DND, proceed as follows:**

1. SELECT OPTIONS.
2. SELECT NEXT until the DND option appears.
3. SELECT DND.
4. SELECT ON.
5. SELECT EXIT.
6. PRESS SPEAKER to end.

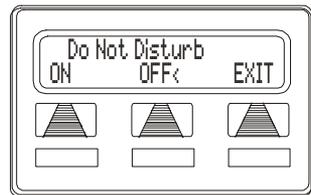

Setting Do Not Disturb


- **To disable the DND condition,**

- REPEAT the above procedure, BUT SELECT OFF instead of ON at step 4.

Note: Although it does not appear on your screen while Do Not Disturb is displayed, the right interactive button will activate the Options menu.

- **To set a Do Not Disturb condition at your telephone when a call rings at your station,**

1. Hear ringing and notice incoming call information in display.
2. SELECT DND. Ringing will stop, caller will hear the do not disturb tone, and your telephone will remain in DND until you disable the feature (described above).

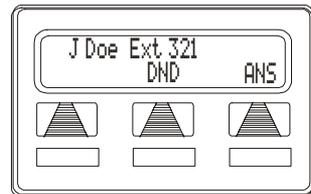

Blocking Calls with DND


7.4 Automatic Redial

If your station has the multiple automatic redial feature enabled, you can place up to 10 numbers in your telephone's redial queue.

Note: The AUTOMATIC REDIAL button described in the following steps must be programmed by your system installer or attendant. Individual users DO NOT have access to programming of this feature.

- **To use the automatic redial feature to redial a busy or unanswered number,**

1. While on the call, SELECT ARDL OR PRESS the AUTOMATIC REDIAL button programmed by your installer.
2. The system repeatedly dials the number until you cancel the feature or the system has dialed the number a pre-programmed number of times (determined by your system installer).

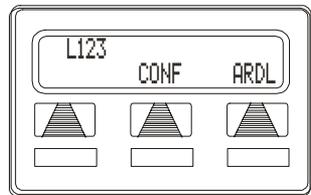

Initiating Auto Redial

3. The AUTOMATIC REDIAL light flashes between redials and turns on steady during redialing.
4. IF your installer has enabled answer supervision on your line, the system automatically cancels automatic redialing and turns the AUTOMATIC REDIAL light off.
5. IF answer supervision is NOT enabled, SELECT ARDL OR the programmed AUTOMATIC REDIAL button while on the call to cancel automatic redialing.
6. IF your system installer has enabled the redial multiple numbers feature, you can have up to 10 numbers in your redial queue. To add numbers to your redial queue, REPEAT step 1 in the above procedure.

- **To scroll through numbers in your redial queue if your telephone is currently idle,**

1. SELECT ARDL OR the programmed AUTOMATIC REDIAL button. The display shows the last number dialed.
2. Choose one of the following:
 - SELECT REMOVE to remove the number from the redial queue.
 - SELECT NEXT to scroll to the next number in the queue.
 - SELECT EXIT to exit from the redial queue.

- **To interrupt the redialing procedure so that you can scroll through numbers in your redial queue,**

1. While your telephone is in the process of dialing a number, SELECT ARDL or the programmed AUTOMATIC REDIAL button twice. This treats the number as answered, cancels automatic redialing for that number, and puts the number back in the automatic redial queue. The display shows the last number dialed.
2. CHOOSE from one of the following:
 - SELECT REMOVE to remove the number from the redial queue.
 - SELECT NEXT to scroll to the next number in the queue.
 - SELECT EXIT to exit from the redial queue.

- **To cancel the automatic redial feature, choose one of the following:**

1. PERFORM any user activity at the station (go on-hook, select the speaker button, etc...),
2. DIAL #72 to delete all numbers from the redial queue,
3. SELECT ARDL or the programmed AUTOMATIC REDIAL button while the number you wish to remove from the redial queue is ringing.

7.5 Tracker Paging System

When installed with your system, the Tracker Paging System option allows you to send call back and parked call messages to Tracker pagers assigned to station extension numbers. Along with the parked call message, the system parks the call in orbit for retrieval by the paged party. The type of message that the system delivers (either alphanumeric or numeric-only) is dependent upon the Tracker pager model in use at the station.

When outside callers call into a system that has both a Tracker Paging option and a voice mail option installed, the system gives these callers the option of either leaving a message or tracking the person that they are calling.

- **To track a called party after receiving a ring—no answer,**

1. MAKE an intercom call to someone AND RECEIVE no answer.
2. SELECT TRACK.
3. HEAR confirmation beep (Tracker page accepted) OR HEAR busy tone (Tracker page not accepted).
4. PRESS SPEAKER to end.



Initiating a Tracker Page

- **To track a called party without first calling them,**

1. PRESS INTERCOM AND DIAL *8.
2. DIAL extension number.
3. HEAR confirmation beep (Tracker page accepted) OR HEAR busy tone (Tracker page not accepted).
4. PRESS SPEAKER to end.

- **To use Tracker to transfer a call to a park orbit for retrieval and transmit the call's park orbit code and caller ID information (if available),**
 1. ANSWER call AND SELECT TRANS.
 2. DIAL extension number.
 3. If the called station does not answer or is busy, SELECT TRACK.
 4. HEAR confirmation beep (Tracker page accepted) OR HEAR busy tone (Tracker page not accepted).
 5. PRESS SPEAKER button to end.

- **To retrieve a call that you parked using the Tracker option,**
 1. PRESS HOLD button to scroll your held calls, (display shows PAGE and extension number of each parked call).
 2. PRESS TAP to retrieve the displayed parked call.

- **If you receive a parked call message on your Tracker pager,**
 1. GO to any system station.
 2. PRESS INTERCOM.
 3. DIAL Tracker pager orbit code (#800 to #899).
 4. RETRIEVE call.

- **To enable or disable a Tracker pager at your station,**
 1. PRESS INTERCOM.
 2. DIAL #07 to enable, OR DIAL #06 to disable.
 3. PRESS SPEAKER to end.

7.6 Auxiliary Jack


Your Impact LCD speakerphone may be equipped with an auxiliary jack that provides an interface for a headset, a tape recorder, an external ringer or an external pager. If your LCD speakerphone is so equipped, you must program one of its programmable buttons to serve as an enable/disable button for each auxiliary device you plan to connect. The system will activate only the device that it identifies in the display, and will activate only one device at any time.

The following modes are programmable with the auxiliary jack:

- The **headset mode** allows you to operate your telephone with a headset instead of as a speakerphone or with the handset.

Note: The recorder, external ringer, or pager requires external power.


- The **recorder mode** allows you to send your voice and that of the distant party to a tape recorder.
- The **ringer mode** allows an external speaker to sound the ringing of your telephone.
- The **pager mode** allows an external paging device to sound all voice announcements (all-call, zone paging, voice announced intercom calls) sent to your telephone.

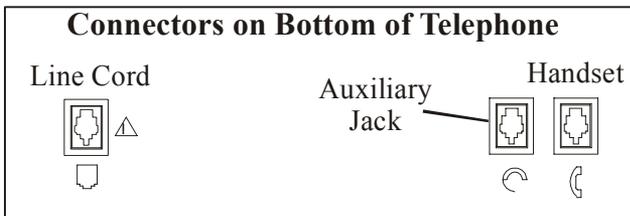


Auxiliary Jack Location

• **Program the enable/disable buttons (at any blank programmable button location) as follows:**

1. SELECT OPTIONS.
2. SELECT NEXT until the FEAT option appears.
3. SELECT FEAT.
4. SELECT NEXT until the desired options appear.
5. SELECT desired auxiliary feature:
 - APAGE to choose pager
 - ARECD to choose recorder
 - ARING to choose external ringer
 - HDSET to choose headset
6. PRESS blank programmable button location to serve as enable/disable button for the feature you've selected.
7. RETURN to previous steps to add another device, OR SELECT SPEAKER to quit.

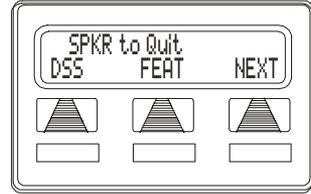

Programming Button

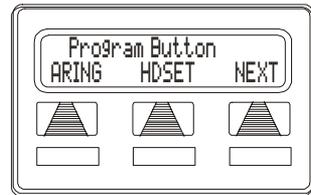

Selecting a Feature

- **To enable an auxiliary mode,**

—SELECT enable/disable button to enable mode. Light associated with button turns on and display denotes feature.

- **To disable an auxiliary mode,**

—SELECT enable/disable button. Light associated with button will turn off and display no longer denotes the feature.

	CAUTION	
<p>With the exception of a headset microphone, do not connect the audio output of any external device to the auxiliary jack. Also, do not connect the tip and ring leads of a telephone line to the auxiliary jack. Do not connect any devices to the auxiliary jack other than those mentioned above.</p>		

7.7 Account Codes

If the installer has arranged your system for account code entry, your display may prompt you to enter an account code after answering a call.

- **To enter account code on an incoming call,**

1. IF available, PRESS programmed ACCOUNT CODE button (the call in progress is not interrupted).
2. IF not available, PRESS INTERCOM AND DIAL *04 (call is automatically placed on hold).
3. DIAL account code. Your telephone automatically returns to the call after you've dialed the complete account code.

If the installer has arranged your system for account code entry, your display may prompt you to enter an account code before dialing. Depending upon how the installer has programmed your system, these account codes may be “forced”(mandatory) for dialing outside numbers

- **To enter account code on an outgoing call,**
 1. DIAL 9 OR other line button (the display will prompt for Account Code if programmed to do so).
 2. PRESS INTERCOM (call is automatically placed on hold).
 3. DIAL *04 AND account code, OR PRESS programmed ACCOUNT CODE button,.
 4. LISTEN for dial tone AND DIAL number you are calling.

Note: See page for instructions on programming a dedicated ACCOUNT CODE button.


7.8 Dial By Name

The Dial By Name feature provides an index of names for you to search through. When you select a name in the index, the system will automatically dial that person's extension number.


- **To use Dial By Name,**

1. SELECT OPTIONS to enter the dial by name menu.
2. SELECT INT button for intercom calling, OR SELECT EXT for speed dial calling.
3. SELECT ALL to view all entries OR DIAL digits corresponding to the letters in the name you want to locate (for example, dial 266 for Comdial).

There is no limit to the number of digits you can dial.

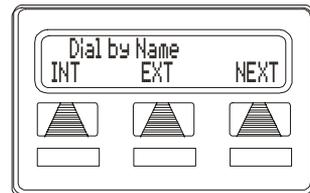


Selecting Dial By Name

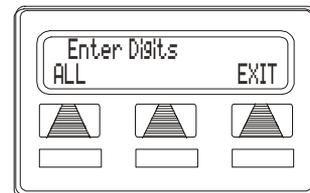

Entering Search

Other Advanced Features

- The display shows the first existing name match to the dialed digits or shows a NO MATCH message if the system can not find a match.
- SELECT NEXT to display the subsequent names in the index until you reach the name you need.
- SELECT DIAL to call the displayed location.
- IF the display says NO MATCH, SELECT BACK to return to previous screen OR ENTER new digits to search for a new name.

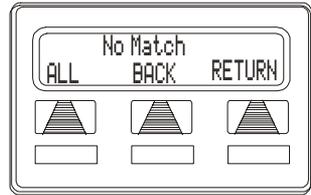

Finding No Match


7.9 Volume Control

7.9.1 SETTING CURRENT VOLUME LEVEL

The volume control on your telephone is a multipurpose control you can use to set the volume (loudness) of the ringer, the speaker, the handset, the headset, background music, and the group listening mode.

- There are four ringer loudness levels (plus an off position). Set these levels as follows:**

—While your telephone is on-hook and idle, PRESS the VOLUME UP OR VOLUME DOWN button once for each change in loudness you desire. The ringer sounds once for each change as an example of the current setting.

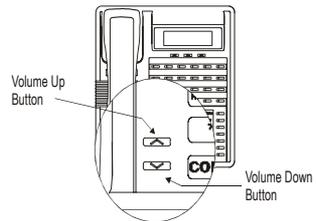


NOTE: If you set the ringer to the OFF position, your telephone will sound a short ring burst once for each call you receive at your station while the ringer is off.

- **There are eight speaker loudness levels. Set these levels for the current call as follows:**
 - While on a call and in speakerphone mode, PRESS the VOLUME UP OR VOLUME DOWN button once for each change in loudness that you desire.
- **There are at least eight handset loudness levels that you can set for the current call as follows:**
 - While on a call and in handset mode, PRESS the VOLUME UP OR VOLUME DOWN button once for each change in loudness that you desire.

Note: When the call ends, the system resets the loudness of all future calls to the programmed (default) setting. For instructions in setting your speakerphone's default volume, see the next section of this chapter.

- **There are eight headset loudness levels that you can set for the current call as follows:**
 - While on a call and in headset mode, PRESS the VOLUME UP OR VOLUME DOWN button once for each change in loudness that you desire.

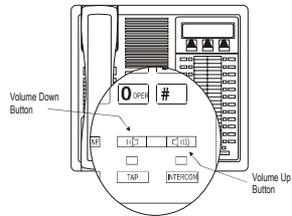

- **There are eight group listening loudness levels. Set the level for the current call as follows:**
 - While on a call and in the group listening mode, PRESS VOLUME UP OR VOLUME DOWN button once for each change in loudness you desire.
- **There are eight background music loudness levels. To set the level,**
 - While background music is on at your station, PRESS VOLUME UP OR VOLUME DOWN button once for each change in loudness you desire. This level remains set for background music until you change it again, even if you turn off the feature and then reactivate it.

7.9.2 MUTING YOUR SPEAKERPHONE

By using the *MUTE* button, you can block transmission of your voice to the distant party. You can do this whether you are using the handset or the speaker.

- **To mute your station,**
 - PRESS MUTE (mute function and light turn on). You can still hear the distant party, but he or she cannot hear you.
- **To speak to the distant party,**
 - PRESS MUTE again (mute function and light turn off).

7.10 Default Volume Control

You can set a permanent loudness level for any volume control setting. The level will remain at this volume (referred to as the default setting) until you change the setting.

- **To set a permanent speaker, headset, handset, or group listening loudness for all future calls,**
 1. PRESS INTERCOM.
 2. ACTIVATE speaker, headset, handset, or group listen mode to be affected.
 3. While in that mode, PRESS VOLUME UP or VOLUME DOWN button to adjust loudness.
 4. DIAL **7 OR PRESS programmed SAVE button to hold the loudness at the last setting for all future calls (until you change the default again).
 5. REPEAT this procedure in each mode until you've set all default volume levels.


7.11 Programmed Button Display

7.11.1 BUTTON FUNCTIONS DISPLAY (BUTTON QUERY)

You can cause the display to identify the function of each button on your telephone.

- **To button query your telephone,**

1. SELECT OPTIONS.
2. SELECT NEXT until the QUERY option appears.
3. SELECT QUERY.
4. PRESS the button in question.
5. READ the displayed information (display will hold for few seconds before the telephone returns to idle).

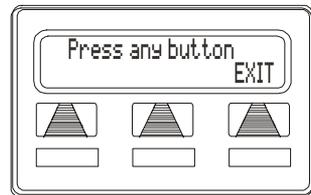

Button Query

7.11.2 STATUS OF BUSY LINES AND STATIONS (BUSY DSS/BLF BUTTON INQUIRY)

You can use this feature to identify the station that is busy on a line or the line on which a station is busy.

- **To identify the station that occupies a busy line,**

1. PRESS DSS/BLF button for busy line.
2. READ your display for intercom number of station that is busy on line.

- **To identify the line that a busy station occupies,**

1. PRESS DSS/BLF button for busy station.
2. READ your display for the busy station's line number.

7.12 Automatic Set Relocation

If your installer has equipped your system with automatic set relocation, when you move your telephone to a new location, the system gives you a choice (through a display prompt) as to whether you want to keep your previous programming or use the programming in the new location.

- **To maintain the extension number and programming features from the old location,**

1. **CONNECT** the telephone line cord to the new jack.
2. **OBSERVE** the flashing **HOLD** light **AND PRESS HOLD** while the light is still flashing (your telephone immediately assumed the features from the previous location).

Note: If you do not select a button after installing the telephone, the system automatically defaults to the programming from the previous location.

- **To assume the extension number and programming features from the new location,**

1. **CONNECT** the telephone line cord to the new jack.
2. **OBSERVE** the flashing **HOLD** light **AND DIAL #** while the light is still flashing (your telephone immediately assumes the features from the new location).

7.13 Paging

Your system provides an all-call or a zone page feature that you access by dialing special codes. This arrangement sounds your voice announcement through the telephone speakers or through an external paging unit.

- **To send a paging announcement,**

1. LIFT handset.
2. PRESS INTERCOM.
3. DIAL 70 through 77 for zones 1–8.

Note: Zone 1 (code 70) provides an all-call function in the default mode.

4. MAKE announcement.
5. REMAIN on line if awaiting a reply (known as a Meet-Me page), OR HANG UP handset.

At times other telephone users may page you with instructions to meet them on line. This is known as a Meet-Me page. You can go to the nearest telephone, dial a code, and be in contact with the paging party.

- **To reply to a Meet-Me page,**

1. LIFT handset of nearest telephone.
2. PRESS INTERCOM.
3. DIAL 78.
4. MEET paging party on line.


7.14 IMIST Module

Impact SCS 8324F-**, 8324S-**, and 8312S-** speakerphones equipped with the optional IMIST module can support an IST device (modem, FAX machine, industry-standard telephone, etc.) in addition to the LCD speakerphone. Depending on system programming, the IST device may be used to make outgoing calls and receive incoming calls. The functionality of the IMIST module depends on the type of system you are using:

Note: Impact SCS phone model 8324SJ Rev. D and later, and model 8312SJ Rev. D and later, will not support the IMIST module.

- The IMIST module functions on a DXP system with the appropriate digital station board, but the IMIST module will not have its own extension number and will not function simultaneously with the speakerphone.
- On a DXP Plus system, the IMIST module functions simultaneously with the speakerphone and has its own extension number if your system has the appropriate digital station board and memory board. If your system does not have the optional enhanced memory board, the IMIST module will function like the one on the DXP system described above. Check with your system installer for complete details.
- On an FXS or FXT system, the speakerphone and IMIST module can function simultaneously and the IMIST module has its own extension number.

Note: The IMIST module does not provide voltage to light a message waiting light. Message waiting lights on devices plugged into the IMIST module will not function.

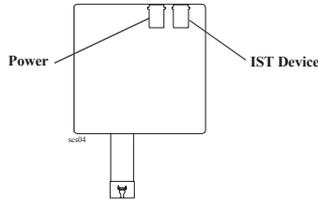**IMIST Module**


7.15 DSS/BLF Console Operation

The IB64X, IB48X, and IB24X *DSS/BLF* consoles have additional buttons and status lights that extend the memory button capability of an adjacent companion telephone. The buttons can be programmed for automatic dialing (speed dial) or direct station selection (DSS) with busy lamp field (BLF) using the instructions provided previously in this guide.

Impact SCS phone model 8324SJ Rev. D and later, and model 8312SJ Rev. D and later will not support a bridged DSS console.

Other Advanced Features


When the installer assigns a *DSS/BLF* console to a station port, the system recognizes it as such and automatically clears (blanks) the console buttons so that you can store numbers at the buttons as you need them.

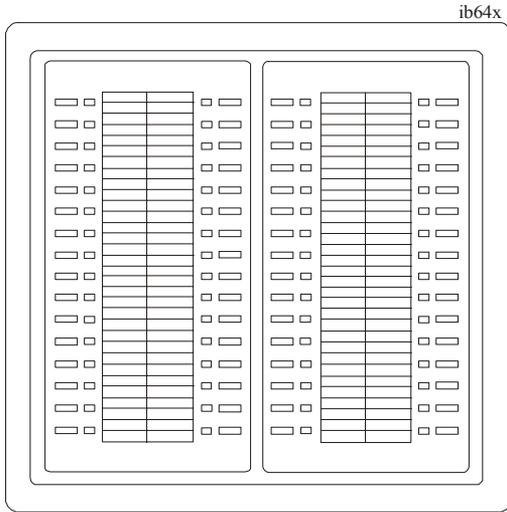

IB64X DSS/BLF Console

7.15.1 ACCESSING THE DSS/BLF CONSOLE BUTTON LEVELS

The IB24X and IB48X DSS/BLF consoles have four levels of buttons, quadrupling the consoles' button capacity. The four buttons at the bottom of each console allow you to select which button level is currently active. To change button levels, press one of the buttons at the bottom of the console. The leftmost button activates level 1, the next button activates level 2, etc. A light beside the appropriate button lights to indicate which level is currently active.

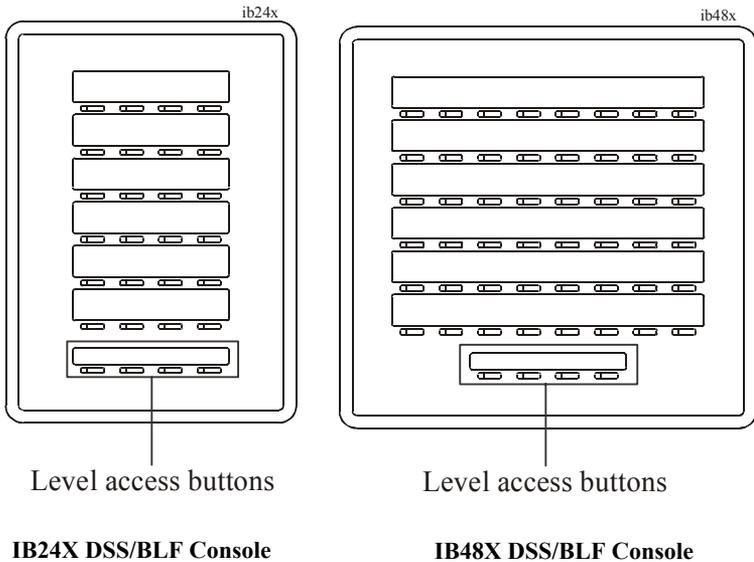

APPENDIX A FEATURE ACCESS CODES

This chart provides you with a quick reference guide of the feature dialing codes. If you wish, you can detach these pages and keep them near your telephone to serve as a stand alone reference. On page the *Feature Access Code* section describes a method to program these codes on your telephone at unused programmable buttons.

Feature	Enable Code	Disable Code
Account Code	<i>INTERCOM</i> + *04 + account code	
All Call	<i>INTERCOM</i> + 70	
Attendant Calling	<i>INTERCOM</i> + 0	
Authorization Code	<i>INTERCOM</i> + #08 + authorization code	
Automatic Callback and Call Waiting	<i>INTERCOM</i> + *6	<i>INTERCOM</i> + #6
Background Music	<i>INTERCOM</i> + 11 or 12	<i>INTERCOM</i> + #1
Call Divert Station	<i>INTERCOM</i> + *55 + extension number	
Call Forward, Personal	<i>INTERCOM</i> + *51 + extension number	<i>INTERCOM</i> + #5
Call Forward, Ring- No Answer, All Calls	<i>INTERCOM</i> + *54 + extension number	<i>INTERCOM</i> + #5
Call Forward, Ring- No Answer, Personal Calls	<i>INTERCOM</i> + *53 + extension number	<i>INTERCOM</i> + #5
Call Forward, All Calls	<i>INTERCOM</i> + *52 + extension number	<i>INTERCOM</i> + #5
Call Park, Orbit 910- 990	<i>INTERCOM</i> + * + 910 to 999	

Feature Access Codes

Feature	Enable Code	Disable Code
Call Park, Pickup	<i>INTERCOM</i> + # + 910 to 999	
Call Pickup, Directed	<i>INTERCOM</i> + *4 + extension number	
Call Pickup, Group	<i>INTERCOM</i> + #4	
Clear Major Alarm Ring	<i>INTERCOM</i> + #09	
DISA Access	Installer Assigned	
Do Not Disturb	<i>INTERCOM</i> + #01	<i>INTERCOM</i> + #01 (repeat)
Do Not Disturb Override	extension number + *03	
DSS Programming	<i>INTERCOM</i> + **3	
Executive Override	extension number + *03	
Hold, Manual	HOLD	
Hold, Exclusive	<i>HOLD</i> + <i>HOLD</i>	
Hold, Directed	<i>INTERCOM</i> + *90	
Hold, Directed Pickup	<i>INTERCOM</i> + #90	
LCD Messaging	<i>INTERCOM</i> + *02 + message	<i>INTERCOM</i> + #02
Line Group 1	<i>INTERCOM</i> + 9	
Line Groups 2-11	<i>INTERCOM</i> + 80 to 89	
Line Groups 12-16	<i>INTERCOM</i> + 60 to 64	
Line Pick Up From Any Station, Zones 1- 4	<i>INTERCOM</i> + 65 to 68	
Line Pick Up From Any Station, All Zones	<i>INTERCOM</i> + 69	

Feature	Enable Code	Disable Code
Meet-Me Answer Page	<i>INTERCOM</i> + 78	
Message Waiting	<i>INTERCOM</i> + *3 + extension number	<i>INTERCOM</i> + #3 + extension number
Message Wait Retrieval	#00	
Operator Access	<i>INTERCOM</i> + 0	
Paging, All Call	<i>INTERCOM</i> + 70	
Paging, Zones 2-8	<i>INTERCOM</i> + 71 to 77	
Paging, Meet-Me	<i>INTERCOM</i> + 78	
Park Orbit Retrieve	<i>INTERCOM</i> + # + 910 to 999	
Park Orbit Send	<i>INTERCOM</i> + * + 910 to 999	
Personal Ringing Tones	<i>INTERCOM</i> + **4 + tone code (1 to 8)	
Redial Last Dialed Number	#	
Remote Station Disable	<i>INTERCOM</i> + *05 + extension number	<i>INTERCOM</i> + #05 + extension number
Response Message	<i>INTERCOM</i> + **6 + button + 01 to 30	
Service Observing	<i>INTERCOM</i> + #03 + extension number	
Speed Dial, Station	Keypad 1, 2, 3, 4, 5, 6, 7, 8, 9, or 0.	
Speed Dial, System	*100 to *599	
Speed Dial, Programming	<i>INTERCOM</i> + **1	
Station Lock	<i>INTERCOM</i> + #04 + code	

Feature Access Codes

Feature	Enable Code	Disable Code
Volume Save	<i>INTERCOM</i> + **7	
Voice-Announce Block	<i>INTERCOM</i> + *2	<i>INTERCOM</i> + #2

NOTE: The dialing codes provided in this quick reference guide are default values. Your system installer has the ability to renumber these codes.

The following table details several unique dialing codes that are only applicable to single line proprietary and industry-standard telephones.

Feature	Enable Code
Pick Up Last Line	*08
Broker's Call	*07
Speed Dial Access Code	*01
Saved Number Redial	*06
Dial Saved Number	*09
TAP Dialing Code	##

APPENDIX B DISPLAY ABBREVIATIONS

This chart identifies the interactive button abbreviations that appear in your display.

Abbreviation	Feature	Definition
ACCT	Account Codes	Stores a button that enables account code entry.
ALERT	Set Reminder	Sets two reminder alerts that will sound at your station at specified times.
ALL	All Calls Forward	Route all of your calls to a different station location.
ANS	Answer	Answers any call ringing at your station.
APAGE*	Auxiliary Pager	Stores a button that selects auxiliary paging speaker operation through the auxiliary jack.
ARECD*	Auxiliary Recorder	Stores a button that selects tape recorder operation through the auxiliary jack.
ARING*	Auxiliary Ringer	Stores a button that selects auxiliary ringer operation through the auxiliary jack.
ARDL	Automatic Redial	Redials a busy call once a minute for 10 minutes.

Display Abbreviations

Abbreviation (Continued)	Feature	Definition
BKSP	Backspace	While programming a speed dial number, backspace erases an incorrect entry.
CALL	Call	Calls a station that turned on your message waiting light.
CAMP	Camp On	Has system call you when busy station becomes idle. When chosen as a feature, stores a button that enables the function.
CFWD	Call Forward	Forwards all of your calls to a different station location. When chosen as a feature, stores a button that enables the function
CALLBK	I Will Call Back	Respond to a SOHVA call with a non-verbal message.
CLEAR	Clear Features	Stores a button that clears a currently active or engaged feature.
CLR	Clear	Cancels a call forward condition.
CONF	Conference	Establishes a conference.
DARK	Dark (contrast)	Makes LCD screen darker.
DISP	Display	Adjusts the contrast of your LCD screen.
DND	Do Not Disturb	Makes your station appear busy to other stations. When chosen as a feature, stores a button that enables the function.

Abbreviation (Continued)	Feature	Definition
DSS	Direct Station Select	Stores a personal intercom number at a DSS button.
EXIT	Exit Selection	Ends a current programming session.
EXT	Speed Dial By Name	Selects speed dial numbers to access through the dial by name interface.
FEAT	Feature	Presents several different features you can store at programmable buttons for later use.
GPLSN	Group Listen	When chosen as a feature, stores a button that enables loud speaker broadcast of distant party's voice.
HDSET	Headset	When chosen as a feature, stores a button that enables headset operation.
HAVE HOLD	Ask Caller To Hold	Send a non-verbal response to a SOHVA caller so he or she will know to place the outside caller on hold.
LIGHT	Light (contrast)	Makes the LCD screen lighter.
MSG	Message	Turns on message waiting light at another station.
MUSIC	Background Music	Turn on the background music at your station. When chosen as a feature, stores a button that enables the function.
NEXT	Next Display	Shows the next display.

Display Abbreviations

Abbreviation (Continued)	Feature	Definition
NoANS	No Answer/Forward	Forwards calls that ring at your station but receive no answer.
OPTIONS	Options	Selects interactive button features.
OVER	Override	Overrides either a do-not-disturb condition or a busy signal at a station you have called.
PAGE	Paging Zone	When chosen as a feature, stores a button that provides one-button access to paging.
PARK	Park Orbit	When chosen as a feature, stores a button that provides one-button parking of calls.
PCKUP	Pick Up	When chosen as a feature, stores a button that allows you to pick up a call ringing elsewhere.
PERS	Personal	Route your personal intercom calls to a different station location.
PRIV	Privacy	When chosen as a feature, stores a button that releases privacy for a current call.
QUERY	Button Query	Displays program status of any button.
RECON	Reconnect	Reconnect you to a transferred call.
RING	Ring Tone	Select different ringing tones.

Abbreviation (Continued)	Feature	Definition
SAVE	Save Number	Permanently saves last number you dialed. When chosen as a feature, stores a button that provides the function.
SDIAL	Speed Dial	Programs a number for one-button calling.
SEND	Send Transfer	Re-transfers a previously transferred call that returned to your station.
SET	Set Feature	Enable call forwarding.
SOHVA	Secure Off-Hook Voice Announcement	Sends a subdued off-hook voice announcement to another station.
SRC	Music Source	Selects which music source will supply background music.
TAKE MSG	Take A Message	Send a non-verbal response to a SOHVA caller so he or she will know to take a message from an outside party.
VAB	Voice Announce Block	Inhibits your station from receiving a SOHVA. Also, blocks voice calls sent over the speaker. When chosen as a feature, stores a button that provides the function.

**Available only on 8024S.*

APPENDIX C GLOSSARY

A

Account Code

A group of numbers, up to 16 digits in length, entered by station users during incoming or outgoing calls; the system uses account codes to identify the calls by category, or special grouping, for call accounting purposes.

All-Call Paging

Paging through the intercoms of all stations in the system.

Assist Button

A button that you can program that will let you send a message requesting assistance to the LCD of another telephone.

Attendant

Also known as the operator; typically, the first person to answer incoming calls and responsible for directing calls to the proper person or department.

Automatic Callback

System will ring a calling telephone when a busy called telephone becomes idle.

Automatic Dialing (or Autodialing)

Using programmable buttons to store numbers for one- or two-button dialing.

Automatic Redialing

Turning on a program that automatically redials the last number dialed once a minute for 10 minutes.

Automatic Route Selection (ARS)

ARS allows the system to automatically select the least costly line group available to a station to route a call. The system modifies the dialed number, if needed, to match the selected line group. ARS makes routing decisions (which lines to route a call over, if and how to modify a number, and costing information) based entirely upon the programming of the system.

Automatic Station Relocation

Process by which the system automatically recognizes particular stations if they are relocated to a different station port; the same class of service and station features are provided the station at the new port.

B

Block Programming

To eliminate the need to program each station individually, programmers can assign features or functions to groups of stations.

Button Query

Feature which allows users to display the functions of programmable buttons on LCD telephones.

C

Call Forward

Designating another telephone to receive intercom calls normally directed to the user's telephone.

Call Forward Outside System (CFOS)

Allows station users to forward incoming or transferred line calls to telephone numbers outside the system.

Call Park

Placing an active call at a particular telephone in system hold (park orbit) and retrieving it by any telephone.

Call Pick-Up

Answering a call at one telephone when it is ringing at another telephone.

Call Transfer

Transferring a call from one station to another. The transfer can be screened, i.e., you find out who is calling and announce them to the party being called; or unscreened, i.e., you transfer the call without identifying the calling party to the called party.

Caller ID

Allows station users to view the originating line number of incoming calls before they are answered.

Camp On

Process that allows a user to wait for a busy or idle line to become available and immediately be called back by the system; also allows users to send a tone to busy telephone to notify the station that a call is waiting.

Central Message Desk

A station that has been assigned to control message waiting lights and deliver messages to other stations in the system.

Class Of Service (COS) Programming

Customized programming of your system by the installer that establishes the basic operating parameters of the system and individual stations.

D

Data Interface Unit (DIU)

This optional unit provides connections for your standard multiline digital telephone and Industry Standard Telephone (IST) device such as a FAX machine or answering machine.

Departmental Station Operation

The operation of stations that are organized into departments.

Dial By Name

This feature allows users to employ any two-line display, LCD speakerphone and its interactive buttons to search through an index of names, locate a desired station name or system speed dial name, and automatically call the located item.

Digital Voice Announcing (DVA)

The DVA is a line-powered device that provides voice prompts for auto-attendant and transfer, or you can use it to enhance the operation of DISA and Tracker.

Direct Inward System Access (DISA)

An enhancement option that allows outside callers to directly call a station or access certain internal system features, including all line groups and ARS. To prevent fraudulent access and unauthorized use, the caller must use an authorization code and system access code to gain access to outside lines as well as many of the advanced telephone features.

Direct Inward Station Dialing (DISD or DID)

This feature allows an outside party to call an intercom station directly without an attendant's assistance.

Direct Station Selection/Busy Lamp Field (DSS/BLF)

Programmable buttons which allow the user one button to place intercom calls to other stations within your system; the button is sometimes referred to as a DSS button. Busy lamp field or BLF is a term for a light that identifies current call status of DSS station. See telephone layout drawings in Chapter 1 for location.

Do Not Disturb

A mode that disables incoming call ringing and intercom calling.

Dual Tone Multiple Frequency (DTMF)

The tones made by your telephone when you dial.

DXP, DXP Plus, FXS and FXT

Common Code Based Systems; DXP, DXP Plus, FXS and FXT Comdial

Communication Systems so named because the programmed function codes of these systems are interchangeable.

Dynamic Line Button

System temporarily assigns a normally unassigned line to an idle line button for certain call handling operations.

E**E&M Tie Lines**

In telephony, a separate pair of leads to your station which are used by system operators for signaling and supervisory purposes.

Exclusive Hold

Only the telephone placing the call on hold can retrieve it.

Executive Override Breaking into a conversation at a busy called telephone. This intrusion is announced by several quick tone bursts over the conversation.

H

Hands free Answer Inhibit

A telephone can be set to block voice calls sent to it over the speaker.

Hookflash

Action that occurs when the TAP button is pressed. Needed for activating host system features.

Hookswitch

The switch on a telephone which, when depressed manually or by the handset, disconnects a call.

I

IMIST

Module which allows the connection of an external device to a Comdial digital telephone.

Industry Standard Telephone (IST)

Analog telephone with only a basic 12 button keypad and no advanced features

Intercom

An internal communication system that allows you to dial another station at your office or location without connecting to the outside telephone system.

K

Keypad

Buttons 0 through 9, * and # used for dialing.

L

Last Number Redialing

Automatically dialing the last number dialed.

LCD

Liquid crystal display; the alphanumeric display of several Comdial Digital Telephone models.

Line Groups

Programmers assemble and program outside lines into distinct line groups which users must dial a certain code to access.

Line Queuing

When several telephones share a line and that line is busy, a user can dial a code and hang up to wait for the line to become idle. When the line becomes idle, the user's telephone will ring.

M

Meet-Me Answer Page

Any user can dial a code in response to an all-call or zone page and be connected to the paging party in a private conversation.

Messaging

Turning on a telephone lamp to let the user know that a message awaits pickup and leaving a message on the display of a telephone that gives information on your status.

Mute

A fixed feature button that keeps a distant party from hearing your conversation. This button also lets you adjust the telephone display contrast from light to dark.

N

Night Transfer

Transferring incoming calls to a particular station(s) for off-hour answering.

O

Operator Station

Also known as the attendant station, this system station is programmed to ring when users dial the operator; usually considered the central message desk of the system although multiple attendant stations are possible

P

Paging

This feature allows station users to dial-up customer provided loudspeaker paging equipment and page over externally placed loudspeakers and determines what paging zones, if any, a station can page over.

Prime Line

A line designated to a particular telephone and automatically selected when the handset is lifted.

Privacy

Line feature, assigned by the programmer, to allow only one station to access a line at any time; no other station has access to the line unless the user makes it available through conferencing.

Programmable Buttons Each telephone or station has buttons that can be user-programmed for autodialing numbers or feature codes, or other special purpose dialing requirements.

Pulse/Tone Switching

Changing from pulse/rotary dial signals to tone/DTMF signals.

Q**Queue**

Method by which a station user waits for an available line by dialing a code and waiting for the system to call back.

R**Response Messaging**

Responding non-verbally to a calling station by pressing a programmed button that sends a message to the calling station's display.

Ringling Line Preference

An automatic connection to any outside line ringing at the station when the station handset is taken off-hook.

Ringling Tones, Personal

A telephone can be arranged to ring in one of six distinctive tones.

S**Saved Number Redialing**

Saving a last manually dialed number for later autodialing.

Screened Call Transfer

Allows users to first announce and then transfer both line and intercom calls from one station or group to another.

Service Observing

Class of service programming option allows users to enter an in-progress call in an unannounced muted mode to monitor the call.

Speed Dialing

Autodialing using the keypad buttons. Speed dialing can be station calls (personal and accessed by only one specific user) or system calls (numbers used and accessed by anyone in the system).

Station

A single system telephone with an individual identity and feature set assigned by the programmer.

Station Message Detail Accounting (SMDA)

Station message detail accounting provides a record of the incoming and outgoing calls handled by the system on selected lines. This record provides information for accounting and traffic analysis studies.

Subdued Off-Hook Voice Announce (SOHVA)

A private announcement that can be made to a busy party which they hear through the receiver of their handset.

System Alarm Reporting

Allows you to view (through the LCD telephone screen) the various system alarms and the stations with which those alarms are associated.

System Speed Dial

System speed dialing provides system users with a repertory of up to 500 numbers that they can dial from any telephone in the system. The installer or the attendant is responsible for storing the system speed dial numbers.

T

TAP (Flash/Recall)

Depending on your system's programming, this button gives you a fresh dial tone or activates a hookflash.

Toll Restriction

Class of service feature by which the system allows or denies outgoing calls to selected users over selected lines.

Tone Call

A ringing intercom call.

Tracker Pager

The Tracker optional pager system allows you to send and receive messages to Tracker pagers assigned to station extension numbers.

TRNS/CNF

A fixed feature button that allows you to transfer outside calls and set up conference calls.

U

Unscreened Call Transfer

Allows users to transfer line or intercom calls from one station or group to another without first announcing them.

Unsupervised Conference

After a establishing a conference between two outside parties, the originator drops out leaving a line to line unsupervised connection with the remaining parties.

V

Voice call

A verbal intercom call.

Voice Announce Blocking (VAB)

A telephone can be set to block voice calls sent to it over the speaker.

Z

Zone Paging

Paging through the intercoms of some stations or departments in the system.

APPENDIX D SPEAKERPHONE CHARACTERISTICS

When using your speakerphone, the microphone and loudspeaker are farther away from you than when you use a handset. Both the signal from the loudspeaker and the signal to the microphone must be strengthened.

When microphones and loudspeakers are close together (such as in a speakerphone), additional amplification typically generates a ringing sound (public address systems do this if the volume is too high or the microphone is too close to a loudspeaker).

7.16 Full-Duplex Speakerphone Characteristics

The *Impact SCS 8324F-*** speakerphone uses the latest full-duplex speakerphone technology. (Full-duplex technology enables both parties on a speakerphone call to speak simultaneously—half-duplex speakerphones allow only one person to speak at a time.) The *8324F-*** will operate in either full-duplex or half-duplex mode depending on the current line conditions.

At the beginning of each call the telephone must perform a “speech training” test. To achieve optimum performance from the full-duplex speakerphone, Comdial recommends that each user in turn speak about 10 consecutive words to allow the telephone to “train” itself. Note that during the “speech training” test, the speakerphone is operating in half-duplex mode.

Depending on the telephone line conditions and the type of speakerphone at the other end, it may not be possible for the 8324F-** to operate in full-duplex mode. If the speakerphone at the other end is a half-duplex speakerphone and both parties are in speakerphone mode, the half-duplex speakerphone is the controlling factor, preventing the 8324F-** from operating in full-duplex mode.

Note: Pressing any button (mute, hold, etc.) on the speakerphone while in full-duplex mode causes the system to perform the “speech training” test again. For example, if you press MUTE while in full-duplex mode, when you release the call from mute, the system will perform the entire “speech training” test again.

7.17 Speakerphone User Guidelines

- Both parties can not talk at the same time. You must wait for silence out of your loudspeaker before talking. You must stop talking to hear the other party.
- Background noise may prevent the sound-activated switches from operating properly. Avoid placing the speakerphone where it will detect sounds from typewriters, keyboards, printers, paging systems, and other equipment.
- Speak slightly louder than normal and with a clear, authoritative voice. For the microphone to best detect your voice, speak within three feet of it and face the telephone.
- Raising the volume of the loudspeaker makes it easier for the sound-activated switches in your telephone to select the distant party’s voice. Lowering the volume of the loudspeaker makes it easier for the switches to select your voice.
- Since the system takes several seconds to provide the best switching, constant sound patterns—such as elongating your words and playing externally-supplied music—may prevent the sound-activated switches from operating properly.

- Place the telephone on a hard surface and away from table edges. Do not place the telephone in corners or enclosures. Do not let obstructions come between you and the microphone. Rooms with hard, flat surfaces that reflect sound may affect the sound-activated switches.
- If you are using a handset and the other party is using a speakerphone, avoid breathing heavily into your microphone. Avoid other sounds that may affect the distant telephone's sound-activated switches.
- In some situations, such as when either you or the distant party are in a noisy environment, you may have to lift your handset to ensure a clear conversation.
- When both you and the distant party use speakerphones, the sound-activated switches can occasionally detect both voices simultaneously, thus blocking out both voices.

APPENDIX E FEATURE NETWORKING SUPPORT

The table below shows all the features available on Set 15A. It identifies whether each feature is for a local stand-alone system or a system-to-system network. System-to-system networking connects several DXP, DXP Plus, FXS and FXT systems together in an arrangement that allows unified communications through the system. Also provided is information on which features Comdial provides remote networking support too.

Feature Name	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Abandoned Hold Release	Terminating	None	Across Network	
Account Code	Both	None	Across Network	Node/COS
Alarms			Local	Node
A-lead			Local	Node
Alternate Attendant	Terminating	Comdial	Local	Node
ANI (passed across the network but must be enabled per node)	Terminating	Comdial/ QSIG	Local (display telephones)	Node

Feature Networking Support

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
ANI DNIS (passed across the network but must be enabled per node)	Originating	Comdial/ QSIG	Local (display telephones)	Node
ANS Detect	Originating	Comdial	Across Network	
ARS	Both	Comdial	Across Network	Node
	N/A	None	Local	Node
Attendant Programing	Both	Comdial	Local	Node
Authorizatio n Code	Originating	None	Local	Node
Auto Hold	Terminating	None	Across Network	Node
Auto Pause	Terminating	None	Across Network	Node
Auto Redial	Originating	None	Across Network	Node
Aux Line			Across Network	Node
Aux Ring			Local	Node
Block Program			Across Network	Incoming DID Node

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Button, Programmable	Both	Comdial	Across Network (with limitations)	Node/Station
Call Costing	Originating	None	Across Network (with limitations)	Node/Station
Call Divert	Terminating	Comdial	Local	Node/Station
Call Forward Default Forward	Terminating	Comdial	Across Network	Node/Station
Call Forward All Immediate	Terminating	Comdial	Across Network	Node/Station
Call Forward All RNA	Terminating	Comdial	Across Network	Node/Station
Call Pickup Directed	Terminating	Comdial	Across Network	Node/Station
Call Pickup Group	Terminating	None	Local	Node/Station
Call Time	Originating	None	Across Network	Node/Station
Call Transfer	Both	Comdial	Across Network	Node/Station
Call Waiting Tone	Terminating	None	Local	Node/Station
Camp On	Terminating	None	Local	Node/Station

Feature Networking Support

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
CFOS	Both	None	Local	Node/Station
Clock Set			Local	Node
Conference	Both	Comdial/ QSIG	Across Network (with limitations)	Station
COS			Local	Node
Day Night Class of Service	Both	Comdial	Local	Node
Delay Hot Line	Terminating	None	Local	Node/Station
Dist Ring	Terminating	None	Local	Node/Station
Dial by Name	Originating	None	Local	Node/Station
Directed Station Hold	Both	None	Local	Node/Station
Disable Station			Local	Node/Station
Disconnect Notification	Both	None	Across Network	
DND/ inhibit/ override	Terminating	Comdial/ QSIG	Local	Node

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
DNIS (passed across the Network but must be enabled per node)	Both	Comdial	Local (display phones)	Node
DSS/BLF	Both	Comdial	Across Network (with limitations)	Node/Station
DTMF Signaling	Both	None	Across Network	
Enhanced Night Mode	Terminating	None	Across Network	Node
Enhanced Ringing	Terminating	None	Across Network	Node
Executive Override	Both	None		
Extended DTMF				
Feature Numbering			Local	Node
Group Listen	Terminating	None	Across Network	Node/Station
Hands Free	Both	None	Across Network	Node/Station

Feature Networking Support

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Hold	Terminating	Comdial/ QSIG	Across Network	Node/Station
Hunt Group (can access Hunt group across Network but members must be local to each other)	Terminating	Comdial	Across Network	Node
Hunt List	Terminating	None	Local	Node/Station
Idle Line	Both	None	Local	Node
Incoming Call Routing	Both	Comdial	Across Network	Node
Intercom Numbering			Local	Node
Intercom Speed Dial Last Number Dialed	Originating	None	Across Network	Node/Station
LCD Contrast	Both	None	Local Station Only	Node/Station
LCD Messaging	Both	None	Local	Node
Line Group	Both	None	Local or Network Channels	Node

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Line Monitoring	Both	Comdial	Local	Node
Line Names	Both	Comdial/ QSIG	Across Network	Node
Line Queue	Both	None		
Lock	Both	None	Local	Node/Station
Location Codes	Both	None	Local	Node
Mark	Both	None	Local	Node/Station
Message Deposit	Both	Comdial	Local	Node/Station
Message Waiting	Terminating	Comdial	Across Network	Node/Station
Music, Background	Both	None	Local	
Music, On Hold	Both	None	Local	
Mute	Both	None	Across Network	Node/Station
Operator/ Network	Both	Comdial	Across Network	Hub
Operator/ Node	Both	Comdial	Local	Node
Page	Both	None	Local	Node
Park Orbit	Terminating	None	Local	Node

Feature Networking Support

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Personal Ring Tone	Terminating	None	Local Station Only	Node/Station
Prime Line	Originating	None	Local	Node/Station
Privacy	Terminating	None	Local	Node/Station
Pulse Set On	Originating	None	Local	Node
Query (button)	Originating	None	Local	Node/Station
Queue	Terminating	Comdial	Local	Node/Station
Quick Transfer	Terminating	Comdial	Across Network (with limitations)	Node/COS
Recall Call Forward			Across Network (with limitations)	Node/Station
Recall Timing (Hunt Group)	Terminating	Comdial/QSIG	Across Network	Node
Record	Both	Comdial	Across Network	Node/Station
Response Message	Both	None	Local	
Ring Monitoring	Terminating	Comdial	Local	Node/Station

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Serial Transfer	Terminating	Comdial/ QSIG	Local	
Service Observe	Originating	None	Local	Node/Station
Shift for Speed Dials	Both	None	Across Network	Node/Station
Silent for Ringing	Both	None	Local	Node/Station
SLPS—Brokers Mode	Both	None	Local	
SLPS—Dial Saved Number	Originating	None	Across Network	
SLPS—Pick Up Last Line	Terminating	None	Across Network	
SLPS—Save Number	Originating	None	Across Network	
SLPS—TAP	Both	None	Across Network	
SMDA/ SMDR	Both	Comdial	Across Network (with limitations)	Node
Softkey	Both	Comdial	Across Network (with limitations)	

Feature Networking Support

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
SOHVA	Terminating	Comdial	Local	Node/Station
SOHVA Service Observe	Originating	None	Local	Node/Station
Dial	Originating	None	Across Network	Node/Station
System Speed Dial	Both	None	Across Network	Node
Station Monitoring (DSS/BLF)	Both	Comdial	Across Network (with limitations)	Hub only
Station Names	Both	None	Across Network	Node/Station
Station State Query	Originating	Comdial	Across Network	Node/Station
Subdue Ringing	Terminating	Comdial	Local	Node/Station
System Manager Prog	Both	None	Local	
System Parameters	Both	None	Local	Node
TAFAS (line answer from any station)	Both	None	Local	Node/Station
Toll Restriction	Both	None	Across Network	Node/COS

Feature Name (Continued)	Type Originating/ Terminating /Both	Remote Networking Support	Feature Parameters	Program Feature
Tracker	Both	Comdial	Local	
Transfer to Voice Mail	Both	Comdial	Across Network	Node/Station
Trunk to Trunk Transfer	Both	Comdial	Across Network	
Voice Announce Block	Terminating	Comdial	Across Network	Node/Station
Serial WP Integration			Across Network	Hub and VM
VVP			Across Network	Hub and VM

INDEX

A

Account Codes 62, 78, 79
all-call 85
All-Call Paging 85
Answering Calls 15, 16, 17
answering calls at night 35
answering within a group 20
answering within a group 20
associated lights 12
Automatic Number Identification 24
Automatic Redial 72
automatic redial 72
Automatic Set Relocation 84
Auxiliary Jack 62, 76

B

basic function 7, 62
basic instructions 18
blocking all SOHVAs 33
Busy Lamp Field (BLF) Light 21, 54, 83
button functions 7, 10
Button Query 83

C

Call Forward 38
Call Pick-Up 20, 35, 63
Caller ID 24
Calling 70
calling stations using DSS 21
Camping On 62
 15, 16, 17, 18, 19, 20, 21, 22, 23, 24,
 35, 36, 37, 38, 51, 52, 54, 55,
 57, 58, 59, 60, 61, 62, 63, 64,
 69, 70, 71, 72, 73, 74, 76, 77,
 78, 79, 80, 81, 82, 83, 84, 85,
 89, 93
Clearing Feature Buttons 64
codes 70, 85
compatible equipment 76
Conferencing 36, 37
configuring with auxiliary jack 76
connecting an external ringer 77

creating conferences 36
creating unsupervised conferences 37

D

default message table 52
Dial By Name 79
Direct Station Select (DSS) Button 10,
 12, 21, 57, 83
Directed Station Hold 19
Display 93
displaying function (button query)
 function (button query) 83
displaying function (button
 query)(button query) 83
Do Not Disturb 62, 71
DSS/BLF Console Button Levels 88
DSS/BLF Console Operation 87

E

enabling/disabling operation 71
entering for incoming calls 78
entering for outgoing calls 79
Exclusive Hold 18

F

Feature Access Button Programming 63
Feature Access Codes 60, 89
Flash Button 10
forced verification of 79
Forwarding Calls 38, 62
function 10, 71, 80
functions 9, 10

G

Group Listening 62, 81

H

handling hold recalls 19
handling multiple calls on hold 19
handling ring no answer calls 38

Handset, setting volume 81
Headset 76, 81
Hold Button 9, 14
Holding Calls 18, 19

I

IMIST Module 86
initial settings 84
Intercom Button 9, 13
intercom calls 16

L

LCD Abbreviations 93
LCD Messages 51, 52
lighting for another station 54
lighting with station to station messaging
station to station messaging 54
Lights, Display 12
Line Access From Any Station 17
Line Groups 35, 59, 70

M

meaning of associated light 13, 14
Meet-Me Answer Page 85
Message Waiting Light 7, 54, 55
monitoring stations 21
Multiple Automatic Redial Queue 72
Music 63, 69, 81
Mute 82
Mute Button 13

N

Night Transfer of Ringing 17
night transferred calls 17

O

outside calls 15

P

Paging 63, 85
Parking Calls 63
Personal Ringing Tone 4

Privacy Release 63
Programmed number table 61
programming a button 62, 63
programming a location 57
programming a music enable button 63
programming a Paging button 63
programming a Parking button 63
programming an enable button 62
programming button 62

Q

queuing for an open line 35
Queuing, line 35

R

receiving messages using 55
Redialing 72, 73
redirecting all calls 38
redirecting personal calls 38
Reminder Alert, setting 61
responding nonverbally 22
responding to SOHVA 22
Response Messaging 22, 55
Messaging 22
Ringer 4, 5, 77, 80

S

Saved Number Redial 24, 63
selecting 69
selecting a line 70
selecting a personal tone 4
selecting from default messages 51
selecting when speed dialing 59
sending 51, 55
sending a Meet-Me page 85
sending a page 85
setting a default volume 82
setting the volume 80, 81
Shift Button 10, 58, 60
Speaker Button 10, 14
Speakerphone 7, 10, 81, 111, 112
Speed Dialing 58, 61
general description of 58
storing at programmable location 60
storing numbers 58
storing speed dial numbers using 58, 60

Subdued Off-Hook Voice Announcement
(SOHVA) 22, 23

T

TAP Button 10
Tracker Paging System 74
Transfer/Conference Button 10
TRNS/CNF 10
turning off 80
turning off ringer 5

U

understanding abbreviations 93
Unsupervised Conferences 37
user guidelines 112
using a redial queue 73
using directed hold 19
using exclusive hold 18
using full-duplex technology 111
using with Caller ID 24

V

VAB 23
Voice Announce Block 63
Voice Announce Block (VAB) 23
Volume Control 82, 84
VOLUME DOWN Button 80
VOLUME UP Button 80

Z

Zone Paging 85

This manual has been developed by Comdial Corporation (the “Company”) and is intended for the use of its customers and service personnel. The information in this manual is subject to change without notice. While every effort has been made to eliminate errors, the Company disclaims liability for any difficulties arising from the interpretation of the information contained herein.

The information contained herein does not purport to cover all details or variations in equipment or to provide for every possible contingency to be met in connection with installation, operation, or maintenance. Should further information be desired, or should particular problems arise which are not covered sufficiently for the purchaser’s purposes, contact Comdial, Inside Sales Department, 106 Cattlemen Road, Sarasota, Florida 34232.

Comdial® strives to design the features in our communications systems to be fully interactive with one another. However, this is not always possible, as the combinations of accessories and features are too varied and extensive to insure total feature compatibility. Accordingly, some features identified in this publication will not operate if some other feature is activated.

Comdial® disclaims all liability relating to feature non-compatibility or associated in any way with problems which may be encountered by incompatible features. Notwithstanding anything contained in this publication to the contrary, Comdial makes no representation herein as to the compatibility of features.

GCA70258.12 06/03
Printed in U.S.A.

COMDIAL®